

# G-BSCY



## Pilot's Operating Handbook

Take Flight  
AVIATION.com 

# Disclaimer

This pdf scan of the Pilots Operating Handbook (POH) is for information, and to aid flight planning only.

It should not replace reference to the original documents, due to possible updates since publication.

These are available for inspection at Take Flight Aviation Limited on request.

Romney Marsh



**AIRCRAFT MODIFICATIONS INC.**

F.A.A. APPROVED

AIRPLANE SUPPLEMENTAL FLIGHT MANUAL

For

PIPER CHEROKEE MODEL PA-28-151

With

LYCOMING 0-320-D2A, -D2B, -D2C, or -D3G

ENGINE INSTALLED

REGISTRATION NUMBER GBSCY

SERIAL NUMBER 28-7515046

This Supplemental Flight Manual is F.A.A. approved material and must be in the airplane for all operations when Lycoming 0-320-D2A, 0-320-D2B, 0-320-D2C or 0-320-D3G engine is installed in accordance with STC SA2969SW. The information contained herein supplements or supersedes the information in the form of placards, markings, and approved manual material. For limitations, procedures and performance information not contained in this Supplemental Flight Manual consult the basic airplane placards, markings and approved manual material.

F.A.A. APPROVED

*for* Jack E. Owens

Don P. Watson, Chief,  
Engineering & Manufacturing Branch  
FEDERAL AVIATION ADMINISTRATION  
Southwest Region  
Fort Worth, Texas 76101

DATE: October 21, 1981

S.T.C. No. SA2969SW

Page 1 of 2 pages



## AIRCRAFT MODIFICATIONS INC.

PIPER CHEROKEE MODEL PA-28-151

### SUPPLEMENTAL FLIGHT MANUAL

#### I. GENERAL

1. ENGINE: Lycoming O-320-D2A  
or  
Lycoming O-320-D2B  
or  
Lycoming O-320-D2C  
or  
Lycoming O-320-D3G
2. PROPELLER: Sensenich 74DM6-0-60  
or  
Sensenich 74DM6-0-58

#### II. LIMITATIONS

1. ENGINE LIMITS: Maximum Continuous:  
150 H.P. - 2650 RPM  
Takeoff (Five (5) Minutes)  
160 H.P. - 2700 RPM
2. PROPELLER LIMITS: Static RPM at maximum throttle setting:  
Not over 2450, Not under 2350  
Diameter: Maximum = 74 inches  
Minimum = 72 inches
3. ENGINE INSTRUMENT MARKINGS: TACHOMETER:  
Green Arc 2200 - 2650 RPM  
Yellow Arc 2650 - 2700 RPM  
Red Radial - 2700 RPM

#### III. PROCEDURES

No Change

#### IV. PERFORMANCE

The performance of this airplane equipped with a Lycoming O-320-D2A, O-320-D2B, O-320-D2C, or O-320-D3G engine is equal to or better than the original F.A.A. approved performance.

F.A.A. APPROVED

S.T.C. No. SA2969SW

DATE: 10/21/81

Page 2 of 2 pages

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE _____ TITLE _____
APPROVED		

APPROVED AEROPLANE FLIGHT MANUAL  
FOR THE PIPER MODEL

PA-28-151 MODIFIED

PREPARED IN ACCORDANCE WITH BRITISH  
CIVIL AIRWORTHINESS REQUIREMENTS

SERIAL NUMBER: 28-7415001 TO 28-7615999

PREPARED BY: J. M. Sheehan  
J. M. Sheehan

CHECKED BY: R. K. Kirby  
R. K. Kirby

APPROVED BY: John Patrick  
John Patrick  
Manager, Flight Test

ISSUE DATE: 10/18/73

DOA SO-1 APPROVED

FAA FOA  
APPROVAL BY: [Signature]  
[Signature]  
FAA/DOA COORDINATOR

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE <u>1</u>

This is the  
Certificate of

This is the Flight Manual which forms part of the  
Certificate of Airworthiness for aircraft

034447/002

SECTION I.

GENERAL

A. Registration Particulars

1. Airplane designation: PIPER Model PA-28-151
2. Registration Marks: G BSOY
3. Constructor's Serial Number: 28-7515046
4. Designed and Constructed by: Piper Aircraft Corporation  
Vero Beach, Florida, U.S.A.  
32960
5. F.A.A. Certificate of Airworthiness for Export:  
Number: \_\_\_\_\_  
Date of Issue: \_\_\_\_\_
6. Model PA-28-151 British Flight Manual, Piper Aircraft Corporation Report VB-575, Approved by the Secretary, Civil Aviation Authority on: \_\_\_\_\_
7. This airplane shall be operated in accordance with the limitations in Section II and any additional limitations in the Supplements contained in Section VI.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 2

SECTION I. GENERAL (continued)  
 B. Table of Contents

	PAGE
<u>SECTION I. GENERAL</u>	
A. Registration particulars .....	1
B. Table of Contents .....	2
C. Amendment System .....	6
D. General Arrangement Drawing .....	9
E. Determination of Temperature in Relation to I.S.A. ....	10
F. Definitions .....	11
<u>SECTION II. LIMITATIONS</u>	
A. Maximum Weight Limitations .....	14
B. Baggage Loading .....	14
C. Fuel System .....	14
D. Centre of Gravity .....	15
E. Power Plant Limitations .....	17
F. Airspeed Limitations .....	19
G. Miscellaneous Limitations .....	21
<u>SECTION III. EMERGENCY PROCEDURES</u>	
A. Introduction .....	28
B. Engine Fire During Start .....	28
C. Engine Power Loss During Take-off .....	28
D. Engine Power Loss In Flight .....	30
E. Power-off Landing .....	31
F. Fire .....	32

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE <u>3</u>
APPROVED		

SECTION I. GENERAL (continued)

	PAGE
G. Loss of Oil Pressure .....	33
H. Loss of Fuel Pressure .....	34
I. High Oil Temperature .....	35
J. Alternator Failure .....	35
K. Engine Roughness .....	36
L. Spins .....	37
M. Open Door .....	37

SECTION IV. NORMAL PROCEDURES

A. Preflight .....	39
B. Walk-around Inspection .....	39
C. Before Starting Engine .....	42
D. Starting Engine When Cold .....	43
E. Starting Engine When Hot .....	43
F. Starting Engine When Flooded .....	44
G. General Information for Starting Engine .....	44
H. Taxi .....	45
I. Before Take-off .....	45
J. Normal Take-off (Flaps up) .....	47
K. Crosswind Component .....	48
L. Take-off Climb .....	48
M. Normal Climb .....	48
N. Normal Cruise .....	48
O. Approach and Landing .....	49
P. Post Landing .....	51



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 4

SECTION I. GENERAL (continued)

	PAGE
Q. Engine Shut-down .....	51
R. Rough Air Flight .....	51

SECTION V. PERFORMANCE

A. General .....	52
B. Maximum Take-off and Landing Weight for Altitude and Temperature .....	58
C. Take-off Procedures and Speeds .....	60
D. Take-off Field Lengths .....	61
E. Net Take-off Flight Path .....	67
F. En Route Performance .....	70
G. Landing Procedures and Speeds .....	73
H. Landing Field Lengths .....	74
I. Net Glide Range .....	77

SECTION VI. SUPPLEMENTS

Explanation of the Supplement System .....	79
Record of Supplements .....	80

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 5

SECTION I. GENERAL ( continued )

LIST OF ILLUSTRATIONS

	PAGE
Figure 1. General Arrangement Drawing .....	9
Figure 2. Determination of Temperature in relation to I.S.A. ....	10
Figure 3. Centre of Gravity Envelope .....	16
Figure 4. Conversion of Wind Velocities .....	53
Figure 5. Pitot Head Location .....	54
Figure 6. Position Error Correction to Obtain E.A.S. (MPH) .....	55
Figure 7. Position Error Correction to Obtain E.A.S. (Knots) .....	56
Figure 8. Maximum Take-off and Landing Weight for Altitude and Temperature .....	59
Figure 9. Take-off Run Required .....	63
Figure 10. Take-off Distance Required .....	66
Figure 11. Net Take-off Flight Path .....	69
Figure 12. En Route Performance Ceiling and Gross Rate of Climb ....	72
Figure 13. Landing Distance Required .....	76
Figure 14. Net Glide Range .....	78

PREPARED

PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.

REPORT VB-575  
MODEL PA-28-151

CHECKED

APPROVED

PAGE 6

SECTION I. GENERAL, (continued)

C. Amendment System

The current amendment state of this manual is noted on the amendment record sheet (Page 7). Amendments to the text are indicated by a vertical line in the margin together with the revision number. The revision number and the revision date are given in the margin of the revised page. This revision number supersedes the original issue and all previous revisions and contains the latest approved information pertinent to the airplane.

Amendments to supplements published by another organization other than Piper Aircraft Corporation, and included in this manual without the consent of Piper Aircraft Corporation, are the responsibility of that organization. These amendments will not necessarily be reflected on the amendment record sheet of Page 80 of Section VI.

A record of approved supplements and their embodiment into the manual is provided for on Page 80 of Section VI.

UNITED STATES F.A.A.  
AMENDMENT RECORD SHEET

REVISION NO.	DATE OF REVISION.			REVISED BY	APPROVAL DATE (CAA)			REVISION TITLE	PAGES AFFECTED
	DAY	MO.	YR.		DAY	MO.	YR.		
1	25	3	74	R.K.	15	5	74	Deleted Reference to Aerobatic Manoeuvres  Qualified Battery Capacity  Deleted Propeller Check  Changed Example & Climb Speed at Light Weight Redrawn	22 & 23  36  45  70  72
				<i>L.H. Fromster</i> LCA SO-1 APPROVED					
2	15	10	74	R.K.	27	11	74	Deleted Reference to Aerobatic Manoeuvres  Specified Battery Capacity  Corrected T.O. Distance Charts	14, 15, 16 & 20  36  63, 66 61, 64
				<i>Ward Evans</i> FAA DCA SO-1 APPROVED					
3	1	8	75	L.H.	27	10	75	Add new wing-flaps extended speed and serial number effectivity.	19, 20, 21, 26, 49
				<i>Ward Evans</i> FAA DCA SO-1 APPROVED					
4	11	5	76	RM				Revised Applicability up to Serial No. 28-7615999	Title & 7
				<i>Ward Evans</i> FAA DCA SO-1 APPROVED					



PREPARED

PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.

REPORT VB-575  
MODEL PA-28-151

CHECKED


APPROVED

PAGE 9

SECTION I. GENERAL, (continued)

D. General Arrangement Drawing (not to scale)


FIGURE 1.

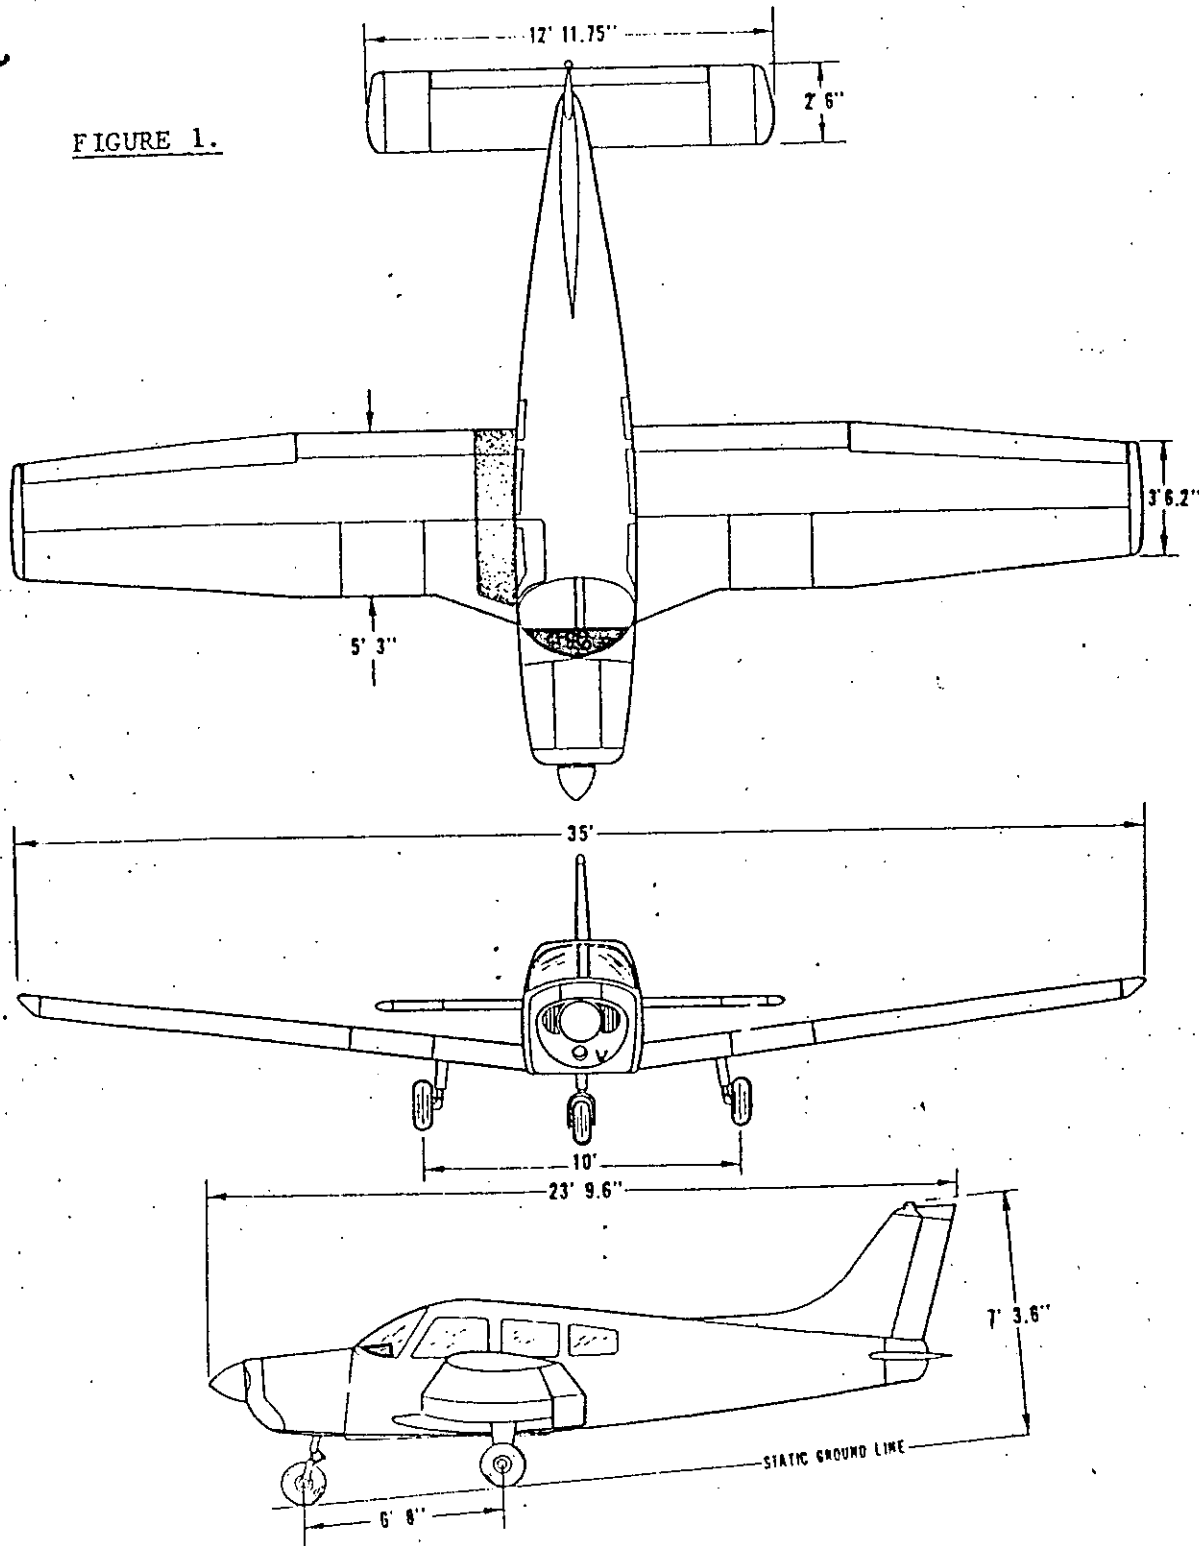

SECTION I: GENERAL (continued)

Figure 2. Determination of Temperature

in Relation to U.S.A.

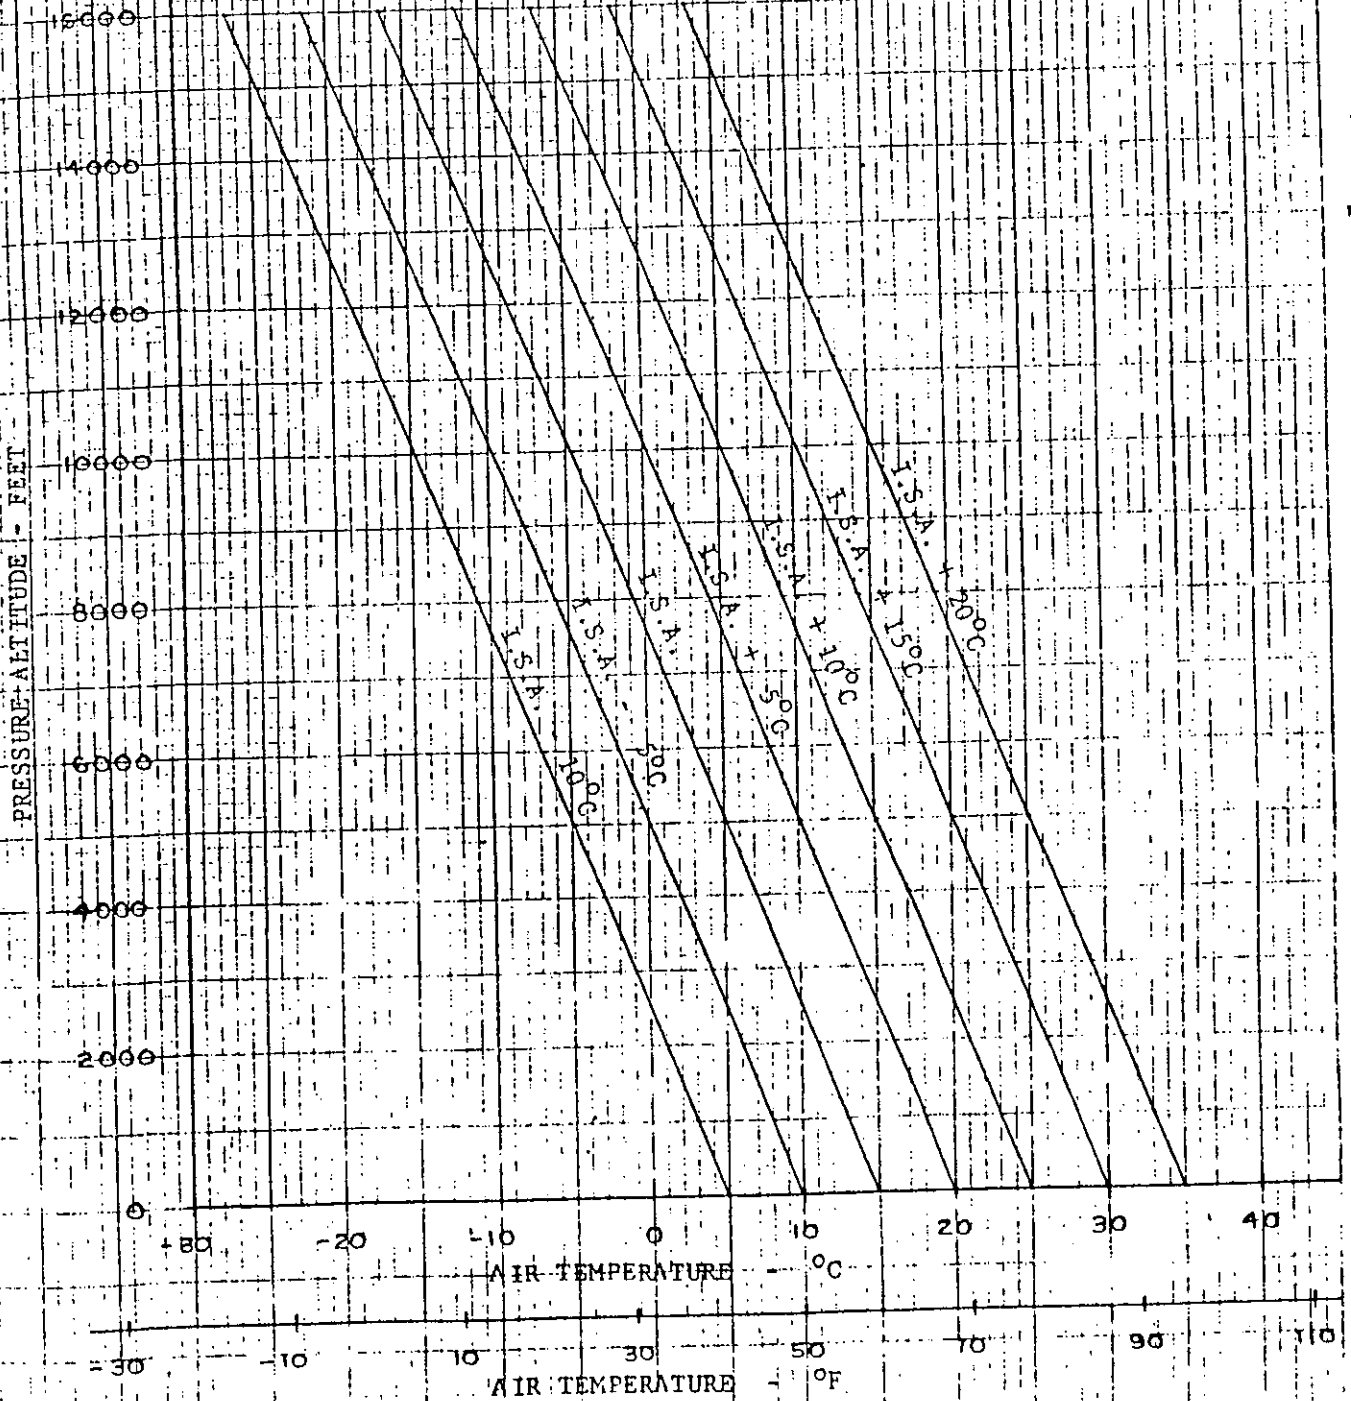

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 11
APPROVED		

SECTION I. GENERAL, (continued)

F. Definitions

1. AIR TEMPERATURE

The temperature of the free air near to, but not influenced by the aeroplane. This temperature may be a reported, forecast or, when permitted by the Air Navigation Regulations, a declared temperature derived in accordance with an approved system,

2. ALTITUDE

The altitude shown on the charts is pressure altitude which is the expression of atmospheric pressure in terms of altitude above mean sea level according to the inter-relation of these factors in the International Standard Atmosphere (I.S.A.). This may be obtained by setting the sub-scale of an accurate pressure type altimeter at 1,013 millibars (29.92 inches or 760 millimeters of mercury).

3. I.S.A.

International Standard Atmosphere. See Page 10 for temperature variation versus altitude.

4. GRADIENT OF CLIMB

The tangent of the angle of climb expressed as a percentage i.e.,  $\frac{\text{change in height}}{\text{horizontal distance traveled}} \times 100$



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL FA-28-151
CHECKED		
APPROVED		PAGE 12

SECTION I.

GENERAL, (continued)

5. GROSS PERFORMANCE

The average performance which a fleet of aeroplanes can be expected to achieve or exceed if satisfactorily maintained and flown in accordance with the associated techniques described in the manual.

6. NET PERFORMANCE

The gross performance modified in the manner prescribed in the relevant requirement to make appropriate allowance for those variations from the Gross Performance which are not dealt with in Operational Regulations.

7. HARD RUNWAY

A surface such as concrete or tarmac.

8. HEIGHT

The lowest distance between the lowest part of the aeroplane and the relevant datum.

9. WEIGHT

The total weight of the aeroplane, including fuel, oil, equipment, crew and payload.

10. A.S.I.R.

The uncorrected Air Speed Indicator Reading.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHIEF		PAGE 13
APPROVED		

SECTION I.

GENERAL, (continued)

11. I.A.S.

The Indicated Air Speed, which is the A.S.I.R. corrected for instrument error only.

12. E.A.S.

The Equivalent Air Speed, which is I.A.S. corrected for position and compressibility errors.

13. T.A.S.

The True Air Speed of the aeroplane relative to the undisturbed air, which is the E.A.S. corrected for altitude and temperature.

14. TAKE-OFF SAFETY SPEED

The minimum speed at which, following sudden and complete failure of the engine in the take-off configuration, adequate control exists to establish a glide at a safe margin above the stall.

15. MANOEUVRING SPEED

The maximum speed for full application of primary flight controls.

16. V<sub>NO</sub>

The Normal Operating Limit Speed which is the maximum cruising speed.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 14
APPROVED		

## SECTION II. LIMITATIONS

THE AEROPLANE MUST BE OPERATED SO THAT THE LIMITATIONS AND INSTRUCTIONS IN THIS SECTION ARE OBSERVED.

- A. The following weights given are maximum limitations.
1. The Maximum Take-off Weight is 2325 pounds.
  2. The Maximum Landing Weight is 2325 pounds.
  3. The Maximum Weight for the manoeuvres listed on Page 27 is 1950 pounds.
  4. The aeroplane is not structurally limited by a zero fuel weight limit.

B. Baggage Loading \*

The maximum baggage capacity is 200 pounds. For aerobatic operation, baggage and aft passengers are not allowed.

C. Fuel System

1. There are no fuel loading limitations. However, it is recommended that the fuel load be symmetrical to provide better roll control.
2. The word "gallon" as used throughout this report means U.S. gallon unless otherwise stated.
3. The unusable fuel in this aircraft has been determined as 1.0 gallon in each wing in critical flight attitudes. (1.0 gallon is the total per side).

Items marked \* must either be placarded or the applicable instrument colour marked.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575
CHECKED		MODEL PA-28-111
APPROVED		PAGE 10

SECTION II. LIMITATIONS (continued)


4. The usable fuel in this aircraft has been determined as 48.0 gallons in critical flight attitudes. (48.0 gallons is the total per aeroplane).
5. The fuel selector may be in either "Right Tank" or "Left Tank" position for any flight configuration. Use fullest tank for take-off and landing.
6. The electric fuel pump should be "ON" for take-off, landing and when the engine driven pump is inoperative. It is a good procedure to use the electric fuel pump when switching tanks.

D. Centre of Gravity

1. The aircraft loading is to be distributed so that the centre of gravity lies between the limits of 83.0 inches aft of the datum at 1950 pounds, 87.0 inches aft of the datum at 2325 pounds and an aft limit of 93.0 inches aft of the datum at 2325 pounds and below. The c.g. limitations have a straight line variation between the points given.
2. The load is to be distributed so that the centre-of-gravity for the manoeuvres listed on Pg. 22 lies between the limits of 83.0 inches aft of the datum at 1950 pounds and an aft limit of 86.5 inches aft of the datum at 1950 pounds and below.
3. The datum is 78.4 inches ahead of the wing leading edge at the inboard intersection of the straight and tapered section.

SECTION II. LIMITATIONS (continued)

D.4. Figure 31 Centre of Gravity Envelope

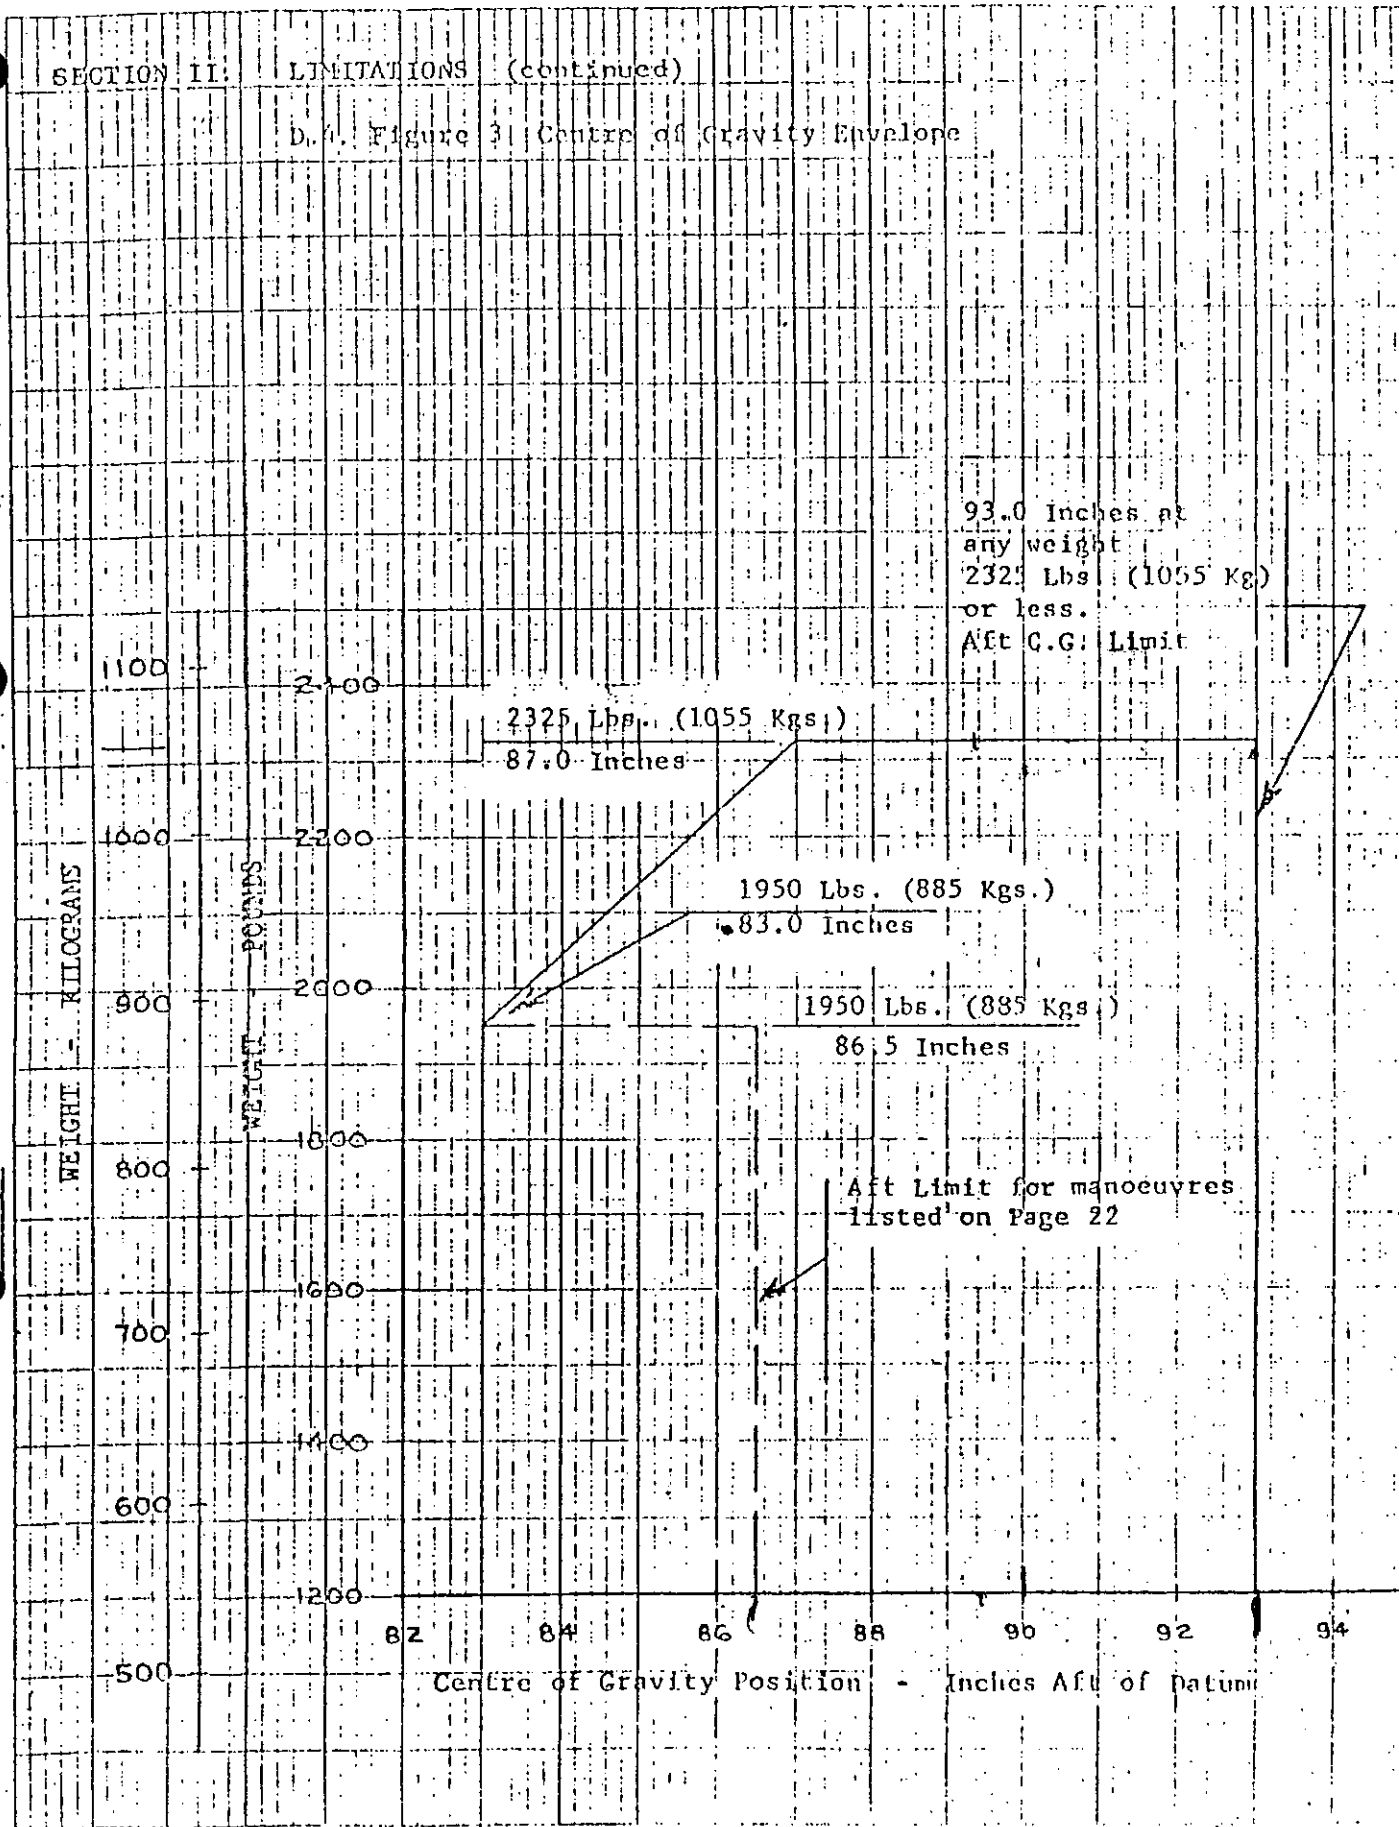

93.0 Inches at any weight 2325 Lbs. (1055 Kg) or less. Aft C.G. Limit

2325 Lbs. (1055 Kgs)  
87.0 Inches

1950 Lbs. (885 Kgs.)  
83.0 Inches

1950 Lbs. (885 Kgs.)  
86.5 Inches

Aft Limit for manoeuvres listed on Page 22

Centre of Gravity Position - Inches Aft of Datum

Rev #2

Civil Aviation Authority  
Safety Regulation Group  
Aviation House  
South Area  
Gatwick Airport  
Gatwick  
West Sussex RH6 0YR  
Tel: Switchboard 0293 567171  
Direct Dial 0293 573149  
Telex: 878753 Fax: 0293 573999



Aircraft Maintenance  
Standards Department

9/97/CtAw/171

A S Bamrah  
(TR) Falcon Flying Services  
Hangar Site 507 Biggin Hill Airport  
Biggin Hill  
Kent TN16 3BN

2 February 1990

CAA EMERGENCY AIRWORTHINESS DIRECTIVE 001-02-90  
PIPER PA-28 SERIES AIRCRAFT  
PLACARDING OF THE CURTIS FUEL STRAINER DRAIN VALVE

#### BACKGROUND

A number of serious accidents have occurred as a result of sudden loss of power after take-off caused by the fuel strainer drain valve not being closed properly after use on Piper PA-28 series aircraft.

#### APPLICABILITY

Applicable to Piper PA-28 series aircraft fitted with a Curtis fuel strainer drain valve, including those modified in accordance with CSE Service Bulletin No 6/75.

#### COMPLIANCE

Compliance is required not later than 2 weeks from the effective date of this Directive which is 7 February 1990.

#### REQUIREMENT

Modify by installing a placard adjacent to the fuel strainer drain valve stating:

WARNING  
ENSURE FUEL DRAIN IS CLOSED AFTER USE

NOTE: Letters to be clear and at least 4 mm high on a contrasting background.

Insert a copy of this Directive into the Limitations Section of the Pilot Operating Handbook/Flight Manual.

Queries regarding this Directive should be referred to the General Aviation Section at the above address.

A handwritten signature in dark ink, appearing to read 'R J TEW'.

R J TEW  
Aircraft Maintenance Approvals Section

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE <u>17</u>

SECTION II. LIMITATIONS (continued)

E. Power-Plant Limitations

ENGINE

Lycoming O-320-E3D with carburetor setting 10-5009

PROPELLER

Sensenich 74 DM6-0-58

Diameter: 74 Inches Maximum  
72 Inches Minimum

Pitch: 58 Inches

Static RPM at maximum permissible throttle setting:

Not over 2375 RPM

Not under 2275 RPM

No additional tolerance permitted.

McCauley 1C160EGM7653

Diameter: 76 Inches Maximum  
74.5 Inches Minimum

Pitch: 53 Inches

Static RPM at maximum permissible throttle setting:

Not over 2400 RPM

Not under 2300 RPM

No additional tolerance permitted.

FUEL

The minimum grade of fuel approved for use in this engine is  
80/87 octane aviation gasoline, specification No. D.

Eng. R.D. 2485 with a maximum limit of 5.5 M.L.S. TEL/Imperial  
Gallon.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 18

SECTION II. LIMITATIONS (continued)

OIL

The oil approved for use in this engine is to specification No. D Eng. 2472 grade B/O and the latest applicable Lycoming Specification.

OIL TEMPERATURE

Normal Operating Range	75°F to 245°F (Green Arc)	*
Maximum	245°F (Red Line)	*

OIL PRESSURE

A minimum oil pressure of 25 PSI should be obtained or exceeded within 30 seconds when starting the engine.

Normal Operating Range	60 PSI to 90 PSI (Green Arc)	*
Caution Range	25 PSI to 60 PSI (Yellow Arc)	*
Minimum	25 PSI (Red Line)	*
Maximum	90 PSI (Red Line)	*

FUEL PRESSURE

Normal Operating Range	.5 PSI to 8 PSI (Green Arc)	*
Maximum	8 PSI (Red Line)	*
Minimum	.5 PSI (Red Line)	*

ENGINE SPEED LIMITATIONS

The maximum permissible rotational speed for all conditions of flight is 2700 RPM (Red Line).\* The normal operating range is 500 RPM to 2700 RPM (Green Arc).\*

Items marked \* must either be placarded or the applicable instrument colour marked.



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 19
APPROVED		

SECTION II. LIMITATIONS (continued)

FUEL/AIR MIXTURE CONTROL

The operation and limitations of the fuel/air mixture shall be in accordance with the latest applicable Lycoming Specification.

F. Airspeed Limitations

1. The operating speed limitations are given in terms of indicated airspeeds (I.A.S.)
2. NEVER EXCEED SPEED,  $V_{NE}^*$   
Is 185 MPH I.A.S. (160 Knots).
3. NORMAL OPERATING LIMIT SPEED,  $V_{NO}^*$   
Is 145 MPH - I.A.S. (126 Knots). During normal cruising flight, the aeroplane should not be flown at a speed greater than  $V_{NO}$ . The aeroplane shall only be flown at speeds between the normal operating limit speed and the never exceed speed at the discretion of the pilot, having due regard to the prevailing atmospheric conditions.
4. MANOEUVRING SPEED\*  
Is 127 MPH - I.A.S. (111 Knots). Manoeuvres involving an approach to the stall or full application of aileron, stabilator, or rudder control shall not be undertaken at a speed greater than the manoeuvring speed.
5. WING-FLAPS EXTENDED SPEED,  $V_{FE}^*$  (S/N 28-7415001 thru S/N 28-7515449)  
Is 130 MPH - I.A.S. (113 Knots). The wing flaps shall not be extended when the aeroplane is flying at a speed greater than  $V_{FE}$ .

6307  
28-7515251

Items marked \* must either be placarded or the applicable instrument colour marked.

Rev #3

PREPARED

CHECKED

PROVED

PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.

REPORT VB-575  
MODEL PA-28-151

PAGE 20

## SECTION II. LIMITATIONS (continued)

WING-FLAPS EXTENDED SPEED,  $V_{FE}^*$  (S/N 28-7615001 and up)  
Is 119 MPH-IAS (103 KTS.). The wing flaps shall not be  
extended when the aeroplane is flying at a speed greater  
than  $V_{FE}$ .

6. ENTRY SPEED FOR MANOEUVERS LISTED ON PAGE 22

Is 127 MPH - I.A.S. (111 Knots) for steep turns, Lazy  
Eights and Chandelles.

7. AIRSPEED INDICATOR COLOR MARKINGSGreen Arc

(Normal Operating Range) 65 MPH to 140 MPH (E.A.S.)

Yellow Arc

(Caution Range-Smooth Air) 140 MPH to 176 MPH (E.A.S.)

White Arc

(Flaps Extended Range) 58 MPH to 125 MPH (E.A.S.)

(S/N 28-7415001 thru  
S/N 28-7515449)

(Flaps Extended Range)

58 MPH to 115 MPH (E.A.S.)

(S/N 28-7615001 and up)

Radial Red Line

(Never Exceed Speed-Smooth Air) 176 MPH (E.A.S.)

Items marked \* must either be placarded or the applicable instrument  
colour marked.

SECTION II. LIMITATIONS (continued)

8. SUMMARY OF AIRSPEEDS

		I.A.S.		E.A.S.	
		MPH	KNOTS	MPH	KNOTS
1.	Never Exceed Speed, $V_{NE}$	185	160	176	153
2.	Normal Operating Limit Speed, $V_{NO}$	145	126	140	122
3.	Manoeuvring Speed	127	111	124	108
4.	Wings Flaps Extended Range (White Arc)	130	113	125	109
	(S/N 28-7415001 thru S/N 28-7515449)	51	44	58	50
	Wings Flaps Extended Range (White Arc)	119	103	115	100
	(S/N 28-7615001 and up)	51	44	58	50
5	Normal Operating Range (Green Arc)	145	126	140	122
		58	50	65	56
6.	Caution Range (Smooth Air Only - (Yellow Arc)	185	160	176	153
		145	126	140	122
7.	Best R/C Speed at Gross Weight	86	75	87	76
8	Entry Speed for Steep Turns, Lazy Eights and Chandelles	128	111	124	108

G. Miscellaneous Limitations

1. CATEGORY

Aircraft of this type are eligible for certification in the General Purpose Category. However, this aeroplane may be restricted to particular use or to some other category, and this will be stated in the Certificate of Airworthiness.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 22

SECTION II. LIMITATIONS (continued)

2. VFR and IFR FLIGHT

Flying VFR and IFR during day or night is permitted when the required equipment is installed and when allowed by the Air Navigation Regulations.

3. FLIGHT BY NIGHT

Night flying is permitted when the required equipment is installed, and when allowed by the Air Navigation Regulations.

4. FLIGHT AT HIGH ALTITUDE

When flying above 10,000 feet, it is the pilot's responsibility to consider the physical limitations of the pilot and passengers, oxygen equipment required, and compliance with all applicable Air Navigation Regulations.

5. FLIGHT IN ICING CONDITIONS

The aeroplane is not approved for flight in icing conditions.

6. APPROVED FLIGHT MANOEUVRES\*

(a) The following manoeuvres are permitted provided the aeroplane is loaded within the approved weight and center of gravity limits.

- (1) Steep Turns
- (2) Lazy Eights
- (3) Chandelles

Items marked \* must either be placarded or the applicable instrument colour marked.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 23
APPROVED		

SECTION II. LIMITATIONS (continued)

- (b) Baggage and aft passengers are prohibited for all manoeuvres listed on Page 22, Item 6.
- (c) All approved flight manoeuvres listed on page 22, Item 6 are prohibited above a gross weight of 1950 lbs.
- (d) Aerobatic manoeuvres are not permitted.

7. FLIGHT LOAD FACTORS

The PA-28-151 structure has been designed to withstand a positive manoeuvring load factor of 4.4 g flaps up, 2.0 g with the flaps fully deflected (40°) and a negative manoeuvring load factor of 1.76 g flaps up without permanent deformation up to a gross weight of 1950 pounds.

The PA-28-151 structure has been designed to withstand a positive manoeuvring load factor of 3.8 g flaps up and 2.0 g with the flaps fully deflected (40°) without permanent deformation up to a gross weight of 2325 pounds.

8. MINIMUM CREW

The minimum crew is one pilot.

Items marked \* must either be placarded or the applicable instrument colour marked.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 24

SECTION II. LIMITATIONS (continued)

9. NUMBER OF OCCUPANTS

The total number of persons carried including crew shall not exceed four or the number of seats which are approved for use during take-off and landing. Children under the age of three years carried in the arms of passengers need not be included in the total.

10. SMOKING

Smoking is prohibited while the aeroplane is on the ground and during take-off and landing.

11. CLIMATIC CONDITIONS

The operating suitability of the aeroplane has been established for temperatures up to the range defined by I.S.A. + 20°C.

A minimum temperature has not been established.

12. AUTOMATIC-PILOT LIMITATIONS

The following limitations are for the Auto-Control III and Auto Flite II installations.

(a) Refer to Supplement number 2 for the limitations of the Auto-Control III installation.

(b) Refer to Supplement number 3 for the limitations of the Auto Flite II installation.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 25

SECTION II. LIMITATIONS (continued)

13. ELECTRIC PITCH TRIM LIMITATION

Minimum height above the terrain for the operation of the electric pitch trim is 400 feet.

14. MAXIMUM ALTITUDE

The maximum permissible operating altitude is given as the absolute ceiling of the aeroplane which is 14,500 feet. (At gross weight and I.S.A. conditions).

15. ADDITIONAL PLACARDS

The following placards and markings are required to be displayed in the aeroplane:

(a) Adjacent to upper door latch - "Engage Latch Before Flight".

(b) On the instrument panel when strobe lights are installed - "Warning - Turn off strobe lights when taxiing in vicinity of other aircraft, or during flight through cloud, fog or haze".

(c) In full view of the pilot:

"Take-off Checklist

Fuel on proper tank  
Electric fuel pump on  
Engine gauges checked  
Flaps - set  
Carb. Heat off  
Mixture - set  
Seat backs erect  
Fasten belts/harness  
Trim Tab - set  
Controls - free  
Door - latched"

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 26
APPROVED		

SECTION II. LIMITATIONS (continued)

(d) In full view of the pilot:  
(S/N 7415001 thru S/N 28-7515449) S/N28-7615001 & up  
"Landing Checklist . . . . . "Landing Check List

Fuel on proper tank . . . . .	Fuel on proper tank
Mixture rich . . . . .	Mixture rich
Electric fuel pump on . . . . .	Elec. Fuel pump on
Seat backs erect . . . . .	Seat backs erect
Flaps - set (125 MPH)	Flaps-Set (115 MPH)
Fasten belts/harness" . . . . .	Fasten belts/harness"

Rev. #3

(e) Adjacent to fuel tank filler cap - "Fuel, 80 - 87  
Aviation Grade Min., Usable capacity 24 Gal., Usable  
Capacity to bottom of filler neck indicator 17 Gal."

(f) On the instrument panel, when the oil cooler  
winterization kit is installed - "Oil Cooler  
Winterization Plate to be removed when Ambient  
Temperature exceeds 50°F."

(g) On the instrument panel in full view of the pilot  
when the Autoflite II is installed:  
"Turn Autoflite on. Adjust trim knob for minimum  
heading change. For heading change, press dis-  
engage switch on control wheel, change heading,  
release switch. Rotate turn knob for turn commands.  
Push turn knob in to engage tracker. Push trim  
knob in for Hi sensitivity. Limitations: Autoflite  
off for takeoff and landing."

16. VACUUM GAUGE

The operating limits for the vacuum system are 5.0 ± .1  
inches of mercury.



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 27

SECTION II. LIMITATIONS (continued)

17. ENGINE STARTER

Limit engine starting to 30 second periods.

18. STALL WARNING SYSTEM

The stall warning system is inoperative with the master switch off.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 28
REVISED		

### SECTION III. EMERGENCY PROCEDURES

#### A. INTRODUCTION

This section contains procedures that are recommended if an emergency condition should occur during ground operation, take-off, or in flight. These procedures are suggested as usually the best course of action for coping with the particular condition described, but are not a substitute for sound judgement and common sense. Pilots should familiarize themselves with the procedures given in this section and be prepared to take appropriate action should an emergency arise.

#### B. ENGINE FIRE DURING START

Engine fires during start are usually the result of over priming. The procedures below are designed to draw the excess fuel back into the induction system:

1. Starter - continue to crank engine
2. Throttle - open
3. Mixture - idle cut-off
4. Electric Fuel Pump - off
5. Fuel selector - off (if time allows)
6. Abandon aircraft if fire continues

#### C. ENGINE POWER LOSS DURING TAKE-OFF

The proper action to be taken if loss of power occurs during take-off will depend on circumstances.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 29

SECTION III. EMERGENCY PROCEDURES (continued)

1. If sufficient runway remains for a normal landing, land straight ahead.
2. If insufficient runway remains, maintain a safe airspeed and make only a shallow turn to avoid obstructions. Use of flaps depends on circumstances. Normally, flaps should be fully extended for touchdown.
3. If you have gained sufficient altitude to attempt a restart, proceed as follows:
  - (a) Maintain safe airspeed
  - (b) Fuel Selector - switch to another tank containing fuel.
  - (c) Electric Fuel Pump - check on
  - (d) Mixture - check rich
  - (e) Carburetor Heat - on
4. If engine failure was caused by fuel exhaustion, power will not be regained after tanks are switched until empty fuel lines are filled, which may require up to ten seconds.
5. If power is not regained, proceed with the POWER OFF LANDING procedure.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 30

SECTION III. EMERGENCY PROCEDURES (continued)

D. ENGINE POWER LOSS IN-FLIGHT

Complete engine power loss is usually caused by fuel flow interruption, and power will be restored shortly after fuel flow is restored. If power loss occurs at low altitude, the first step is to prepare for an emergency landing.

(See POWER OFF LANDING.) Maintain an airspeed of at least 83 MPH IAS, and if altitude permits, proceed as follows:

1. Fuel Selector - switch to another tank containing fuel.
2. Electric Fuel Pump - on
3. Mixture - rich
4. Carburetor Heat - on
5. Engine Gauges - check for an indication of the cause of power loss
6. Primer - check locked
7. If no fuel pressure is indicated, check tank selector position to be sure it is on a tank containing fuel.
8. When power is restored:
  - (a) Carburetor Heat - off
  - (b) Electric Fuel Pump - off (If fuel pressure decreases below green arc, turn electric fuel pump on, refer to Item III. H. page 34 ).

If the above steps do not restore power, prepare for an emergency landing. If time permits:

9. Ignition Switch - "L" then "R" then back to "BOTH"
10. Throttle and Mixture - different settings

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 31

SECTION III. EMERGENCY PROCEDURES (continued)

(This may restore power if problem is too rich or too lean a mixture, or partial fuel system restriction.)

11. Try another fuel tank - (Water in the fuel could take some time to be used up, and allowing the engine to windmill may restore power. If power loss is due to water, fuel pressure indications will be normal.)
12. If engine failure was caused by fuel exhaustion, power will not be regained after tanks are switched until empty fuel lines are filled, which may require up to ten seconds.
13. If power is not restored, proceed with POWER OFF LANDING Procedures.

E. POWER OFF LANDING

1. If loss of power occurs at altitude:
  - (a) Trim the aircraft for best gliding angle (83 MPH-IAS).
  - (b) Look for a suitable field.
2. If measures taken to restore power are not effective, and time permits, check charts for airports in the immediate vicinity for a possible landing.
3. Notify appropriate authorities of difficulty and pilot's intentions via radio.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 32
APPROVED		

SECTION III. EMERGENCY PROCEDURES (continued)

4. When a suitable field has been located:
  - (a) Establish spiral pattern around the field
  - (b) Attempt to have 1000 feet altitude above the ground at the downwind position.
  - (c) As much as possible, make a normal approach.
  - (d) Excess altitude may be lost by widening your pattern, using flaps, slipping, or a combination of these.
  - (e) Touchdowns should normally be made at the lowest possible airspeed with full flaps.
5. When committed to a landing:
  - (a) Ignition - off
  - (b) Master Switch - off
  - (c) Fuel Selector - off
  - (d) Mixture - idle cut-off
  - (e) Seat Belt and Harness - tight

F. FIRE

1. The aircraft is not equipped with a fire detection system. Thus, fire is detected by the following means:
  - (a) Visual observation of flames or smoke
  - (b) Smell
  - (c) Presence of unusual heat in the cabin
2. Check the source of the fire by the following:
  - (a) Visual observation

PREPARED

CHECKED

APPROVED

PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.

REPORT VB-575  
MODEL PA-28-151

PAGE 33

SECTION III. EMERGENCY PROCEDURES (continued)

- (b) Instrument readings
- (c) Discerning the character of the smoke

3. Electrical Fire

- (a) Master Switch - off
- (b) Vents - open
- (c) Cabin Heat - off
- (d) Land as soon as practical

4. Engine Fire

- (a) Mixture Control - idle cut-off
- (b) Fuel Selector - off
- (c) Electric Fuel Pump - check off
- (d) Master Switch - off
- (e) Magneto Switch - off
- (f) Throttle - closed
- (g) Dive to blow out fire (if altitude permits)
- (h) Proceed with POWER OFF LANDING procedure.

G. LOSS OF OIL PRESSURE

1. Loss of oil pressure may be either partial or complete.

A partial loss of oil pressure usually indicates a malfunction in the oil pressure regulating system, and a landing should be made as soon as possible to investigate the cause, and prevent engine damage.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 34

SECTION III. EMERGENCY PROCEDURES (continued)

2. A complete loss of oil pressure indication may signify oil exhaustion or may be the result of a faulty gauge. In either case, proceed toward the nearest airport, and be prepared for a forced landing. If the problem is not a pressure gauge malfunction, the engine may stop suddenly. Maintain altitude until such time as a dead stick landing can be accomplished. Don't change power settings unnecessarily, as this may hasten complete power loss.
3. Depending on the circumstances, it may be advisable to make an off airport landing while power is still available, particularly if other indications of actual oil pressure loss, such as sudden increase in temperatures, or oil smoke, are apparent, and an airport is not close.
4. If engine stoppage occurs, proceed to POWER OFF LANDING.

H. LOSS OF FUEL PRESSURE

1. Electric Boost Pump - on
2. Fuel Selector - check on full tank
3. If problem is not an empty fuel tank:
  - (a) Land as soon as practical
  - (b) Have engine driven fuel pump checked



PREPARED

PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.REPORT VB-575  
MODEL PA-28-151

CHECKED

PAGE 35

APPROVED

## SECTION III. EMERGENCY PROCEDURES (continued)

I. HIGH OIL TEMPERATURE

1. An abnormally high oil temperature indication may be caused by a low oil level, an obstruction in the oil cooler, damaged or improper baffle seals, a defective gauge, or other causes. Land as soon as practical at an appropriate airport and have the cause investigated.
2. A steady rapid rise in oil temperature is a sign of trouble. Land at the nearest airport and let a mechanic investigate the problem. Watch the oil pressure gauge for an accompanying loss of pressure.

J. ALTERNATOR FAILURE

1. Loss of alternator output is detected through a zero reading on the ammeter.
2. Insure that the reading is zero and not merely low by actuating an electrically powered device.
3. If no increase in the ammeter reading is noted, alternator failure can be assured and the following should be executed:
  - (a) Reduce electrical load
  - (b) Alternator circuit breakers - check
  - (c) "Alt" switch - off (for 30 seconds), then on.
4. If the ammeter continues to indicate no output, or alternator will not stay reset, :
  - (a) Turn off "ALT" switch.
  - (b) Maintain minimum electrical load.

## SECTION III. EMERGENCY PROCEDURES (continued)

(c) Land as soon as practical.

(d) In this case, all electrical load is being supplied by the battery. The battery endurance is 39 minutes of night operation.

K. ENGINE ROUGHNESS.

1. Engine roughness is usually due to carburetor icing, and may be accompanied by a slight loss of airspeed or altitude. If too much ice is allowed to accumulate, restoration of full power may not be possible. Therefore, prompt action is required.
2. Carburetor heat - on (See Item K.4). RPM will decrease slightly and roughness will increase. Wait for a decrease in engine roughness or an increase in RPM, indicating ice removal. If no change in approximately one minute, return carburetor heat to COLD. If the engine is still rough, try steps below.
  - (a) Mixture - Adjust for maximum smoothness. Engine will run rough if too rich or too lean.
  - (b) Electric Fuel Pump - on.
  - (c) Fuel Selector - Change to other tank to see if fuel contamination is the problem.
  - (d) Engine Gauges - Check for abnormal readings. If any gauge readings are abnormal, proceed accordingly.

## SECTION III. EMERGENCY PROCEDURES (continued)

(e) Magneto Switch - "L" then "R", then back to "BOTH". If operation is satisfactory on either magneto, proceed on that magneto at reduced power, with mixture full rich, to a landing at the first available airport.

3. If roughness persists, prepare for a precautionary landing at pilot's discretion.
4. Partial carburetor heat may be worse than no heat at all, since it may partially melt ice, which will re-freeze in the intake system. When using carburetor heat, therefore, always use full heat, and when ice is removed return the control to the full cold position.

L. SPINS

Intentional spins are prohibited. In the event that an unintentional spin is encountered, recovery can be accomplished by immediately using the following procedures:

1. Throttle - Idle
2. Rudder - Full opposite to direction of rotation.
3. Control Wheel - Full forward
4. Rudder - Neutral (when rotation stops)
5. Control Wheel - as required to smoothly regain level flight attitude.

M. OPEN DOOR

To close the door in flight, proceed as follows:

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 38

SECTION III. EMERGENCY PROCEDURES (continued)

1. Slow aircraft to 100 MPH-IAS
2. Cabin Vents - Close
3. Storm Window - Open
4. If upper latch is open - Latch
5. If lower latch is open:
  - (a) Open top latch
  - (b) Push door open further
  - (c) Close rapidly
  - (d) Top latch - latch
6. A slip to the right will assist in latching the door.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 39

SECTION IV. NORMAL PROCEDURES

A. Preflight

1. Make sure the weather is suitable for the flight.
2. Plan the navigation (if going cross-country).
3. Check weight and balance for the flight: (See Figure 3 on page 16 ).
4. Investigate performance and range. (See performance section of this manual.

B. Walk-Around Inspection

1. In Cabin:

- (a) Avionics - turn off, to save power and wear on the units.
- (b) Master Switch - turn on.
- (c) Fuel quantity - ensure adequate for flight plus reserve.
- (d) Master Switch - turn off to save battery.
- (e) Ignition Switch - should be off to prevent inadvertent start during inspection of propeller.
- (f) Mixture Control - should be in idle cut-off position, again to prevent inadvertent engine start.
- (g) Trim indicators - set to neutral so that tabs may be checked for alignment.
- (h) Flaps - extend and retract to check operation.  
This should be done before engine start so that you can hear any noise which might indicate binding.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 40

SECTION IV. NORMAL PROCEDURES (continued)

- (i) Control wheel - if a seat belt is used as a control lock, unfasten and free control wheel.
- (j) Paperwork - check that the proper aircraft papers are aboard and that the necessary inspections have been performed.

2. Outside Airplane

- (a) Right wing, aileron and flap - no damage, no ice. Check hinges.
- (b) Right main gear - no leaks, tires inflated and not excessively worn, approximately 4.5 inches piston exposed under static load. Check brake blocks and discs for wear and damage.
- (c) Right wing tip and leading edge - no damage or ice.
- (d) Fuel cap - open to check quantity and color of fuel. Check cap vent, and then secure.
- (e) Right fuel sumps (2 locations) - drain, check fuel vent.
- (f) Cowling - open access door to inspect engine.
  - (1) Check oil quantity - eight quarts maximum. Insure dipstick is properly seated.
  - (2) Check for obvious fuel and oil leaks.
  - (3) Secure access door and check cowling and inspection covers for security.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 41
APPROVED		

SECTION IV. NORMAL PROCEDURES (continued)

- (g) Gascolator - drain.
- (h) Windshield - check for damage and cleanliness.
- (i) Propeller - check for nicks, oil leaks, cracks on spinner and security of spinner.
- (j) Alternator belt - check.
- (k) Nose Section - overall structure and surface undamaged. Check landing light condition.
- (l) Nose Gear - check for leaks, approximately 3.25 inches piston exposed under static load, tire inflated and not excessively worn. Tow bar removed and stowed properly.
- (m) Air Inlets - check for foreign matter (bottom of cowl and each wing root)
- (n) Left Fuel sumps (2 locations) - drain, check fuel vent.
- (o) Fuel Cap - open to check quantity and color of fuel. Check cap vent and then secure.
- (p) Pitot Tube - holes unobstructed, heat checked by feel if need is anticipated.
- (q) Left Main Gear - no leaks, tires inflated and not excessively worn, approximately 4.5 inches piston exposed under static load. Check brake blocks and discs for wear and damage.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 42
APPROVED		

SECTION IV. NORMAL PROCEDURES (continued)

- (r) Stall Warning Vane - no damage, free movement.
- (s) Left Wing Tip and Leading Edge - no damage or ice.
- (t) Empennage - no damage, free of ice, hinges secure.
- (u) Stabilator - freedom of motion.
- (v) Antennas - secure and undamaged.
- (w) Baggage Compartment Door - close and secure after baggage is properly stored and secured.
- (x) Navigation and Landing Lights - check (after master switch and light switches have been turned on in cabin). Check panel and interior lights.
- (y) Cabin Door - close and secure.

C. Before Starting Engine

1. Seats adjusted.
2. Seat belts, shoulder harness - fastened.
3. Parking brake - set.
4. Circuit breakers - in.
5. Radios - off.
6. Set carburetor heat control in the full cold position.
7. Fuel selector - select desired tank.
8. Alternator - on.



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 43

SECTION IV. NORMAL PROCEDURES (continued)

D. Starting Engine When Cold

1. Master Switch - on.
2. Electric Fuel Pump - on.
3. Mixture Control - advance to full rich.
4. Throttle Control - pump throttle control full open and closed 2 to 3 times then set control 1/4 open.
5. Starter - engage by rotating magneto switch clockwise and pressing in.
6. Throttle control - desired setting when the engine fires.
7. If engine does not fire within 5 to 10 seconds,
  - (a) Starter - disengage.
  - (b) Priming Pump - prime with one to three strokes.
  - (c) Repeat steps 1 through 6 without pumping the throttle control.

E. Starting Engine When Hot

1. Throttle - open approximately 1/2 inch.
2. Master Switch - on.
3. Electric Fuel Pump - on.
4. Mixture Control - idle cut-off.
5. Starter - engage by rotating magneto switch clockwise and pressing in.
6. When the engine fires,
  - (a) Mixture Control - advance.
  - (b) Throttle Control - advance to desired setting.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB.-575 MODEL PA-28-151
CHECKED		PAGE <u>44</u>
APPROVED		

SECTION IV. NORMAL PROCEDURES (continued)

F. Starting Engine When Flooded

1. Throttle Control - open full.
2. Master Switch - on.
3. Electric Fuel Pump - off.
4. Mixture Control - idle cut-off.
5. Starter - engage by rotating magneto switch clockwise and pressing in.
6. When the engine fires,
  - (a) Mixture Control - advance.
  - (b) Throttle Control - retard to desired setting.

G. General Information for Starting Engine

1. When engine is firing evenly - advance throttle to 800 RPM.
2. If oil pressure is not indicated within 30 seconds,
  - (a) Stop engine.
  - (b) Determine trouble.
  - (c) Oil pressure indication may take longer in cold weather.
3. If engine has failed to start refer to the "Lycoming Operating Handbook, Engine Troubles and their Remedies".
4. Starter cranking is limited to 30 seconds with a two minute delay between cranking periods. Longer cranking periods decrease the life of the starter.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575
CHECKED		MODEL PA-28-151
APPROVED		PAGE 45

SECTION IV. NORMAL PROCEDURES (continued)

H. Taxi

1. Before taxiing, the brakes should be checked by moving forward a few feet, throttling back and applying pressure on the toe pedals. The following equipment may be checked during taxiing.
  - (a) Instruments - turn indicator, directional gyro, coordination ball.
  - (b) Heater and Defroster - especially important on a cold day.
2. The autopilot, if installed, should be off during taxiing, and the electric fuel pump should be off in order to check the operation of the engine-driven fuel pump.

I. Before Take-off

1. Warm up engine between 800 RPM and 1200 RPM.
  - (a) Limit to two minutes in warm weather.
  - (b) Limit to four minutes in cold weather.
2. Avoid prolonged idling at low RPM.
3. If necessary to hold for take-off, it is recommended to idle engine at 1200 RPM.
4. A thorough check should be made before take-off, using a check list. Before advancing the throttle to check the magnetos, be sure that the engine is warm enough to accept the power if it is a cold day. If there is no hesitation in engine action when throttle

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 46

SECTION IV. NORMAL PROCEDURES (continued)

is advanced, the engine is warm enough.

(a) Parking Brake - on.

(b) Engine run-up.

(1) Throttle Control - forward to 2000 RPM.

(2) Mixture Control - full rich.

(3) Electric fuel pump - on.

(4) Magnetos - check (right and left)

Maximum drop - 175 RPM.

Maximum differential drop - 50 RPM.

(5) Carburetor Heat - on. A drop in RPM indicates proper operation. Turn carburetor heat off.

(6) Throttle Control - retard, 800 RPM to 1200 RPM.

(c) Fuel Selector - on proper tank.

(d) Engine Gauges - in the green arc.

(e) Vacuum Gauge - 5.0 inches of mercury.

(f) Alternator - on.

(g) Altimeter - set.

(h) Attitude Indicator - set.

(i) Clock - wound and set.

(j) Quadrant Friction - adjusted.

(k) Wing Flaps - set.

(l) Trim Tabs (stabilator and rudder) - set.

(m) Controls - free, full travel.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 47

SECTION IV. NORMAL PROCEDURES (continued)

- (n) Seat Backs - erect.
- (o) Seat Belts and Shoulder Harness - fasten.
- (p) Cabin Door - latched.

J. Normal Take-Off (Flaps Up)

Take off should not be attempted with ice or frost on the wings. Take-off distances and 50-foot obstacle clearance distances are shown on charts in the Performance Section of this manual. The performance shown on charts will be reduced by soft, wet or grassy surface.

Avoid fast turns onto the runway, followed by immediate take-off, especially with a low fuel supply. As power is applied at the start of the take-off roll, look at the engine instruments to see that the engines are operating properly and putting out normal power, and at the airspeed indicator to see that it is functioning.

The take-off performance given on pages 63 and 66 is based on a take-off speed of 74 MPH IAS (64 Kts. IAS). Accelerate the aeroplane to this airspeed and rotate. This airspeed applies to any take-off weight.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 48

SECTION IV. NORMAL PROCEDURES (continued)

K. Crosswind Component

1. The maximum crosswind component in which the aeroplane has been demonstrated to be safe for take-off and landing is 17 knots at a tower height of 33 feet.

L. Take-Off Climb

The climb performance presented on page 69 is based on a climbing speed of 64 knots - IAS (74 MPH - IAS). The electric fuel pump may be turned off when a safe altitude has been attained.

M. Normal Climb

The climb performance presented on page 72 is based on a climbing speed of 74 Knots - IAS (86 MPH - IAS) at a gross weight of 2325 pounds. The electric fuel pump may be turned off when a safe altitude has been attained.

N. Normal Cruise

When leveling off at cruise altitude, the pilot may reduce to a cruise power setting in accordance with the Power Setting Table in the Owner's Handbook. The normal cruising power is 75 percent of the rated horsepower of the engine. The mixture should be leaned in accordance with the recommendations for the O-320-E3D engine in the Lycoming Operator's Manual which is provided with the aircraft.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		PAGE 49
APPROVED		

SECTION IV. NORMAL PROCEDURES (continued)

In order to keep the aeroplane in best lateral trim during cruising flight, the fuel should be used alternately from each main tank. It is recommended that one main tank be used for one hour after take-off, then the other main tank be used until nearly exhausted, then return to the first main tank. Do not run tanks completely dry in flight.

O. Approach and Landing

Prior to entering the traffic pattern the following landing checklist should be observed:

1. Seat Backs - erect.
2. Seat Belts and Shoulder Harness - fastened.
3. Fuel Selector - on proper tank.
4. Electric Fuel Pump - on.
5. Mixture Control - full rich.
6. Flaps - set as required:
  - (a) Maximum speed permissible to lower the flaps is 113 Kts-IAS (130 MPH-IAS). S/N 28-7415001 thru S/N 28-7515449
  - (b) Flaps up, approach speed is 71 Kts - IAS (82 MPH-IAS).
  - (c) 10° (first notch), approach speed is 69 Kts - IAS, (79 MPH - IAS).
  - (d) 25° (second notch), approach speed is 66 Kts - IAS, (76 MPH - IAS).
  - (e) 40° (third notch), approach speed is 63 Kts - IAS, (73 MPH - IAS).

Rev #3

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 50

SECTION IV. NORMAL PROCEDURES (continued)

7. Carburetor Heat - off. Use carburetor heat only when there is an indication of carburetor icing. Use of carburetor heat reduces the power which may be critical in the case of a go-around. Additionally, full throttle operation with carburetor heat on is likely to cause detonation.

The amount of flap used during landings and speed of the aircraft at contact with the runway should be varied according to the landing surface and conditions of wind and aeroplane loading. It is generally good practice to contact the ground at minimum possible safe speed consistent with existing conditions.

Normally, the best technique for short and slow landings is to use full flap and enough power to maintain the desired airspeed and approach flight path. Reduce the airspeed during flare out and contact the ground close to stalling speed. After ground contact hold the nose wheel off as long as possible. As the aeroplane slows down, lower the nose and apply brakes. There will be less chance of skidding the tires if the flaps are retracted before applying the brakes. Braking is most effective when back pressure is applied to the control wheel, putting most of the aeroplane weight on the main wheels. In high wind conditions, particularly in strong



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 51

SECTION IV. NORMAL PROCEDURES (continued)

crosswinds, it may be desirable to approach the ground at higher than normal speeds with partial or no flaps. The landing performance presented on page 76 is for full flaps, 40° deflection and variable weight.

P. Post Landing

After leaving the runway

1. Electric Fuel Pump - off.

Q. Engine Shut-Down

1. Radio and Electrical Equipment - off.
2. Throttle Control - closed.
3. Mixture Control - idle cut-off.
4. Magneto Switch - off.
5. Master Switch - off.
6. Parking Brake - on.

R. Rough Air Flight

In conditions of extreme turbulence, reduce power to slow the aeroplane slightly below the design manoeuvring speed of 111 Kts - IAS (127 MPH - IAS).

When flying in extreme turbulence or strong vertical currents and using the autopilot, the altitude-hold mode should not be used.

# CIVIL AVIATION AUTHORITY

CAA CHANGE SHEET NO 2 ISSUE 1 TO THE PIPER PA-28-151  
FLIGHT MANUAL REPORT VB-575.

(CAA Ref: 1390/49107)



Serial No: 28-751504b Registration Mark: G-BDLY

## ADDITIONAL LIMITATIONS AND INFORMATION FOR UK CERTIFICATION

*The limitations and information contained herein either supplement or, in the case of conflict, override those in the flight manual.*

### PERFORMANCE CORRECTIONS

The limitations and information contained herein either supplement or, in the case of conflict, override those in the Approved Aeroplane Flight Manual.

Flight Tests have demonstrated that the aeroplane fails to achieve the performance scheduled in the flight manual.

The corrections listed below must, therefore, be applied to the flight manual performance information whenever it is used, in addition to any other correction which may be applicable as indicated by the text. It is not permissible to extrapolate the scheduled data beyond the limits of the existing charts.

Page 59 Maximum Take-Off and Landing Weight for Altitude and Temperature

Enter fig 8 at a weight 200 lbs above the actual aircraft weight or at an altitude 3000 ft above the actual aerodrome altitude.

Page 63 Take-off Run Required (Fig 9)

Enter fig 9 with the actual temperature, altitude and weight and add 20% to the resulting take-off run required or enter the chart at a weight 200 lbs heavier than the actual weight.

Page 66 Take-off Distance Required (Fig 10)

Enter fig 10 with the actual temperature, altitude and weight and add 20% to the resulting take-off distance required or enter the chart at a weight 200 lbs heavier than the actual weight.

*To be inserted facing page 52 of the manual and the CAA revision record sheet amended accordingly.*



CAA Approved  
23 JUNE 2000



Page 69 Net Take-off Flight Path - Net Gradient of Climb (Fig 11)

Enter fig 11 with the actual temperature, altitude and weight and add 20% to the resulting take-off distance required or enter the chart at a weight 200 lbs heavier than the actual weight.

Page 72 En Route Performance Ceiling and Gross Rate of Climb (Fig 12)

To obtain the gross rate of climb, enter fig 12 with the actual temperature and aircraft weight, but increase altitude by 3000 ft.

To obtain the performance ceiling, use aircraft weight and actual temperature and decrease scheduled ceiling by 3000 feet.

Page 76 Landing Distance Required (Fig 13)

No change

END

CAA Approved

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 52


SECTION V. PERFORMANCE

A. General

1. The aeroplane is classified in Performance Group D.
2. The representative cruising true airspeed for flight over water is 110 knots (127 MPH).
3. The performance presented in this section is based upon the aeroplane using the engine and propellers listed in the Limitations Section of this manual.
4. The performance may not be extrapolated beyond the limits stated in this manual and those presented on the graphs.
5. A graph for conversion of wind velocities to the wind component along the flight path is presented on page 53 of this manual.

SECTION V. PERFORMANCE (Continued)

Conversion of Wind Velocities - Figure 4.

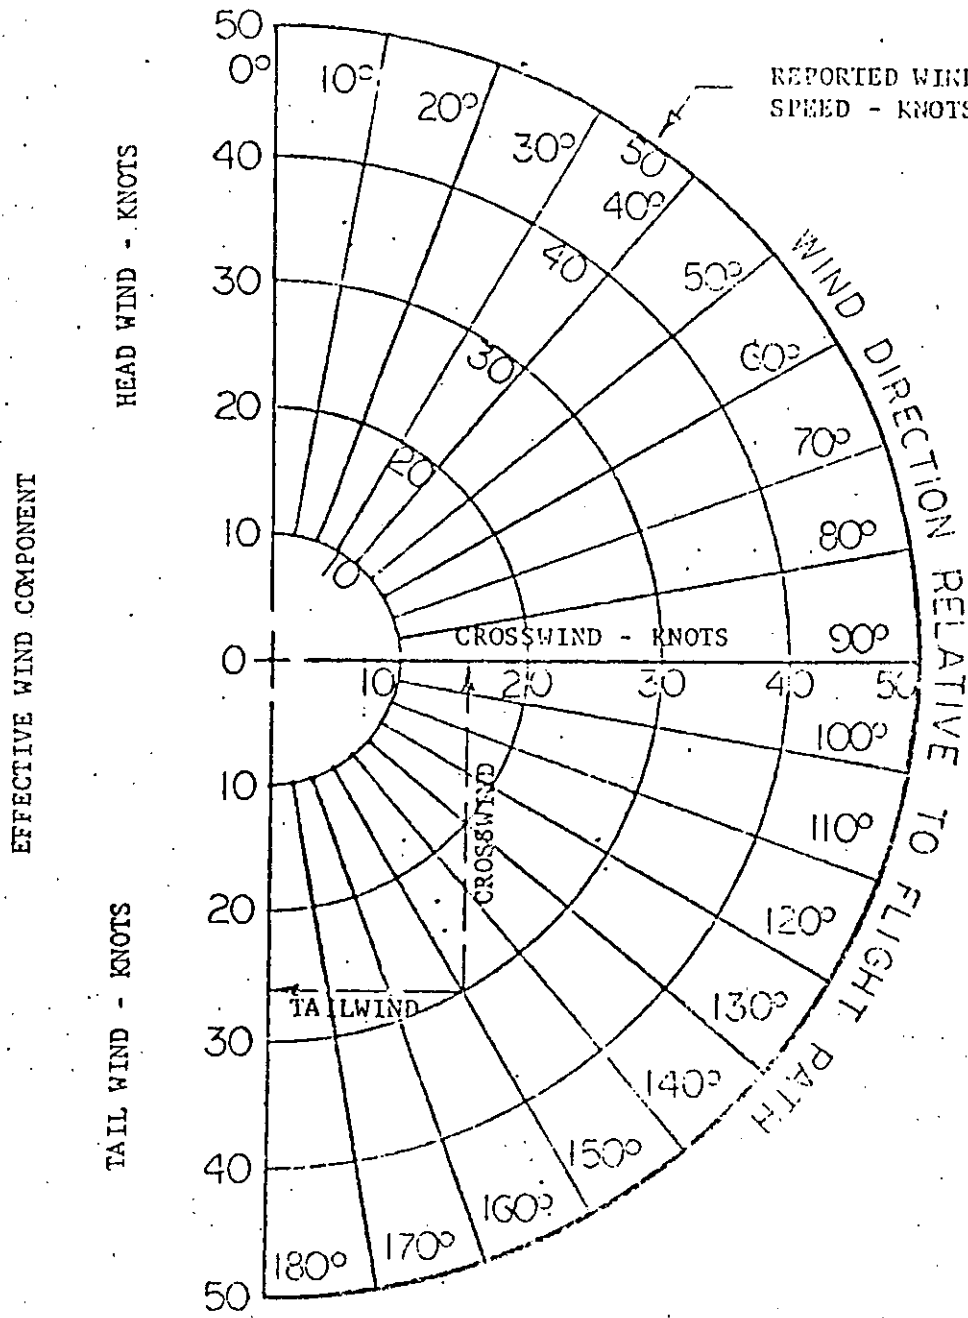

Example: Reported wind is 30 Knots and 150° relative to the aeroplane flight path or runway heading. The crosswind component is 15 Knots and the tailwind component is 26 Knots.

PREPARED

CHECKED

APPROVED


PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.REPORT VB-575  
MODEL PA-28-151

PAGE 54

## SECTION V. PERFORMANCE, (continued)

## 6. Pitot head location

(a) Figure 5.

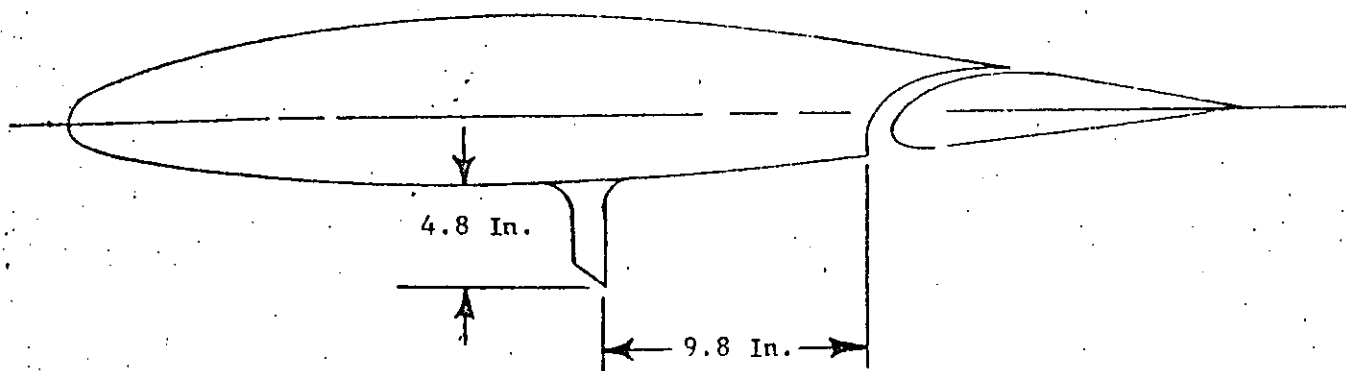

(b) Left wing location is Station 124.4 Inches.

(c) Pitot head is parallel to the centerline of the aeroplane.


(d) A static vent is located in the bottom of the pitot head.

7. The position error corrections to be applied to the I.A.S. to obtain E.A.S. are shown in Figures 6 and 7. Corrections are based on a weight of 2325 pounds. The variation of the correction at other weights is small.
8. The maximum static error to the altimeter is less than 50 feet in all conditions.

SECTION V. PERFORMANCE (continued)

7. Position Error Correction to obtain E.A.S.

(a) Figure 6 .

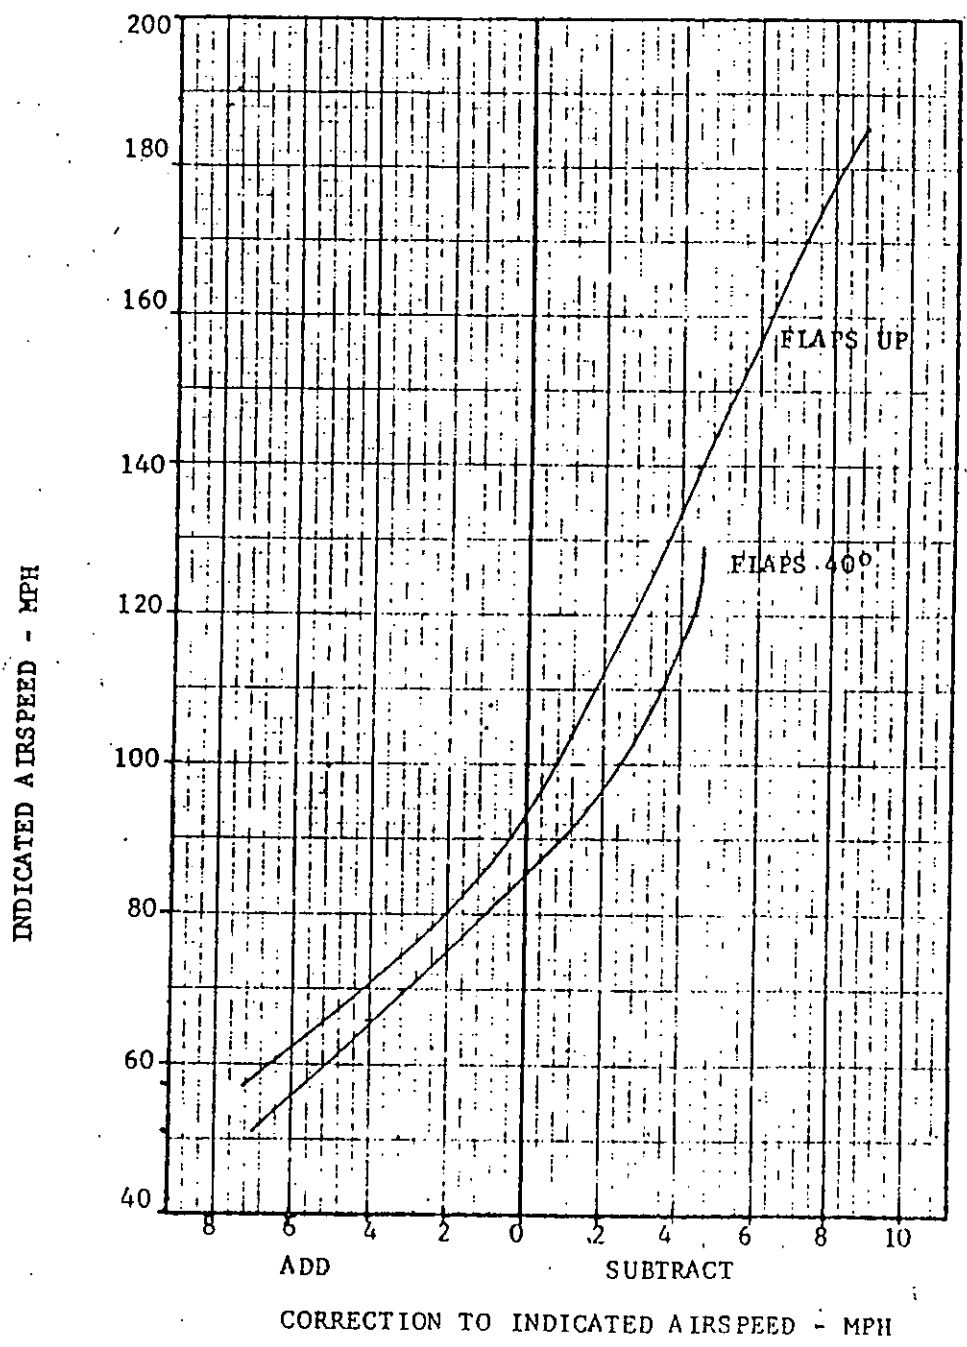

PREPARED

CHECKED

APPROVED

PIPER AIRCRAFT CORP.  
DEVELOPMENT CENTER, VERO BEACH, FLA.


REPORT VB-575  
MODEL PA-28-151

PAGE 56

SECTION V. PERFORMANCE (continued)

7. Position Error Correction to obtain E.A.S.

(a) Figure 7.

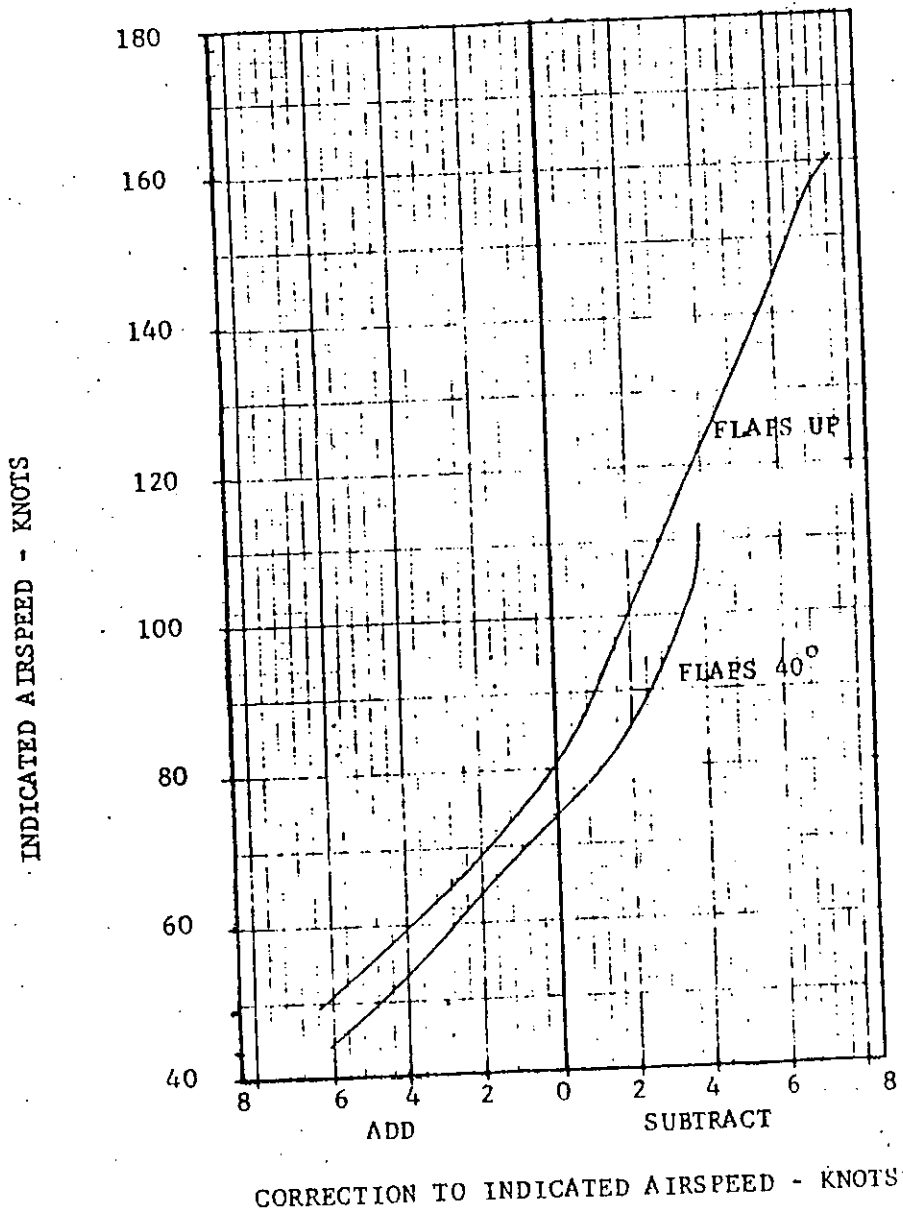



SECTION V. PERFORMANCE (continued)

9. The power-off stalling speeds for several bank angles at forward C.G., and gross weight are given in the following tables.

Angle of Bank	0°				20°				40°			
	I.A.S.		E.A.S.		I.A.S.		E.A.S.		I.A.S.		E.A.S.	
	MPH	Kts	MPH	Kts	MPH	Kts	MPH	Kts	MPH	Kts	MPH	Kts
Flaps Up	58	50	65	56	60	52	67	58	69	60	74	64
Flaps 40°	51	44	58	50	53	46	60	52	62	53	66	58

Angle of Bank	50°				60°			
	I.A.S.		E.A.S.		I.A.S.		E.A.S.	
	MPH	Kts	MPH	Kts	MPH	Kts	MPH	Kts
Flaps Up	78	67	80	70	91	79	91	79
Flaps 40°	69	60	72	63	82	71	82	71

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 58

SECTION V. PERFORMANCE (continued)

B. MAXIMUM TAKE-OFF AND LANDING WEIGHT FOR ALTITUDE AND TEMPERATURE - FIGURE 8.

The maximum permissible take-off weight for varying altitudes and temperatures is shown in figure 8.

The example given by the arrowed dashed line shows that for an aerodrome altitude of 3800 ft. and an air temperature of 25°C (ISA + 18°C, 77°F) the maximum permissible take-off and landing weight is 2220 Lbs. (1007 Kgs.).


NOTE:

The weight may be limited by other performance considerations such as take-off distance or obstacle clearance becoming critical.

EXPLANATION OF FIGURE

By observing the weight-altitude-temperature data in figure 8 the PA-28-151 will have a gross rate of climb of 400 feet per minute (flaps up) at the take-off surface.

FIGURE 8. MAXIMUM TAKE-OFF AND LANDING WEIGHT  
FOR ALTITUDE AND TEMPERATURE

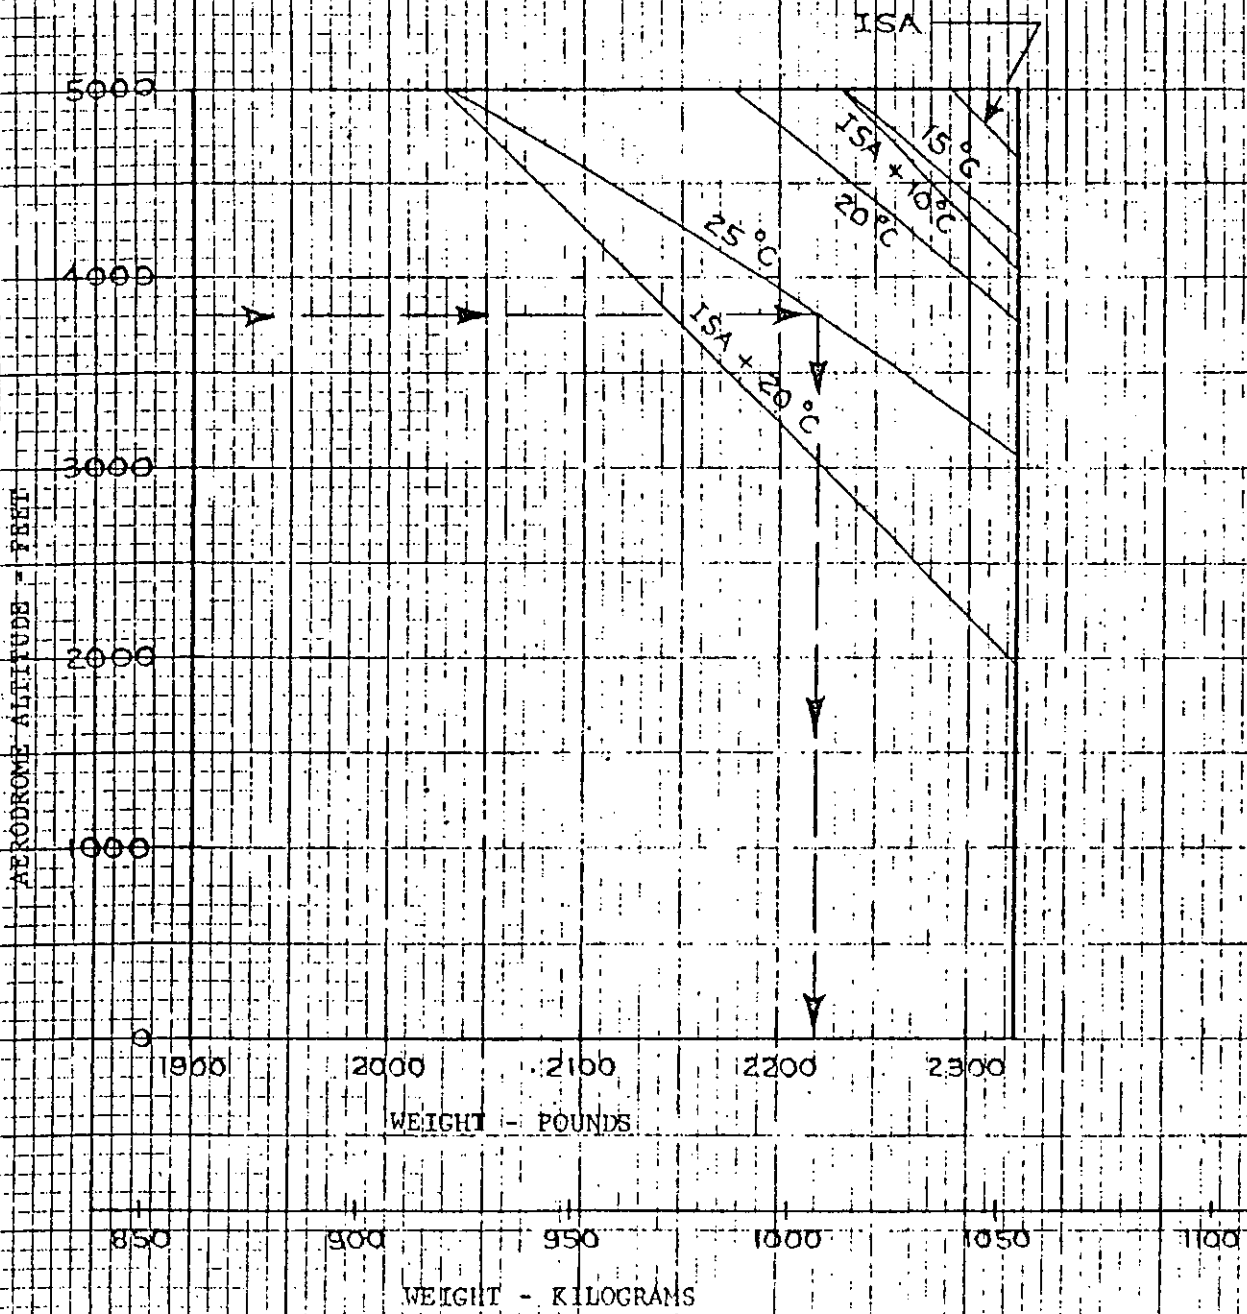

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 60

SECTION V. PERFORMANCE (continued)

C. Take-off Procedures and Speeds

1. TAKE-OFF TECHNIQUE

With the flaps up and the engine at full throttle, accelerate the aeroplane to the take-off safety speed of 64 Knots - I.A.S. (74 MPH - I.A.S.) and initiate the lift-off. This speed applies to all weights and altitudes.

2. MAXIMUM CROSSWIND COMPONENT

The maximum crosswind component in which the aeroplane has been demonstrated to be safe for take-off and landing is 17 Knots (20 MPH) at a tower height of 33 feet.

DESIGNED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575
MODEL		MODEL PA-28-151
APPROVED		PAGE 61

SECTION V. PERFORMANCE (continued)

D. Take-off Field Lengths

1. TAKE-OFF RUN REQUIRED - FIGURE 9.

The take-off run required from rest to the point of lift off is shown in Figure 9 for varying air temperatures, aerodrome altitudes, weights, reported wind components and uniform runway slopes.

ASSOCIATED CONDITIONS:

Engine	Full Throttle
Wing Flaps	Retracted
Technique	Accelerate to the take-off safety speed of 74 MPH-I.A.S., 64 Knots (77 MPH-E.A.S., 67 Knots). This take-off safety speed is for all weights and altitudes and lift off should be initiated at this speed.
Runway	Dry Tarmac Runway (See Note 2).

ILLUSTRATED EXAMPLE:

The example given by the arrowed dashed line shows that with an air temperature of 21°C (I.S.A. + 7° C, 70°F) at an aerodrome altitude of 500 feet and a weight of 1980 pounds (900 Kg.), with a reported headwind component of 10 knots and a uniform uphill runway slope of 1%, the take-off run required is 1830 feet (558 metres).

NOTES:


- (1) The measured take-off run required has been factored by 1.15 to obtain the scheduled take-off run required.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 62

SECTION V. PERFORMANCE (continued)

- (2) For operation from short dry grass, the distances given for a dry tarmac runway should be increased by 6.5%.
- (3) The wind correction grids are factored so that 50% of headwinds and 150% of tailwinds are obtained. Reported winds may, therefore, be used directly in the grids.

FIGURE 9. TAKE-OFF RUN REQUIRED

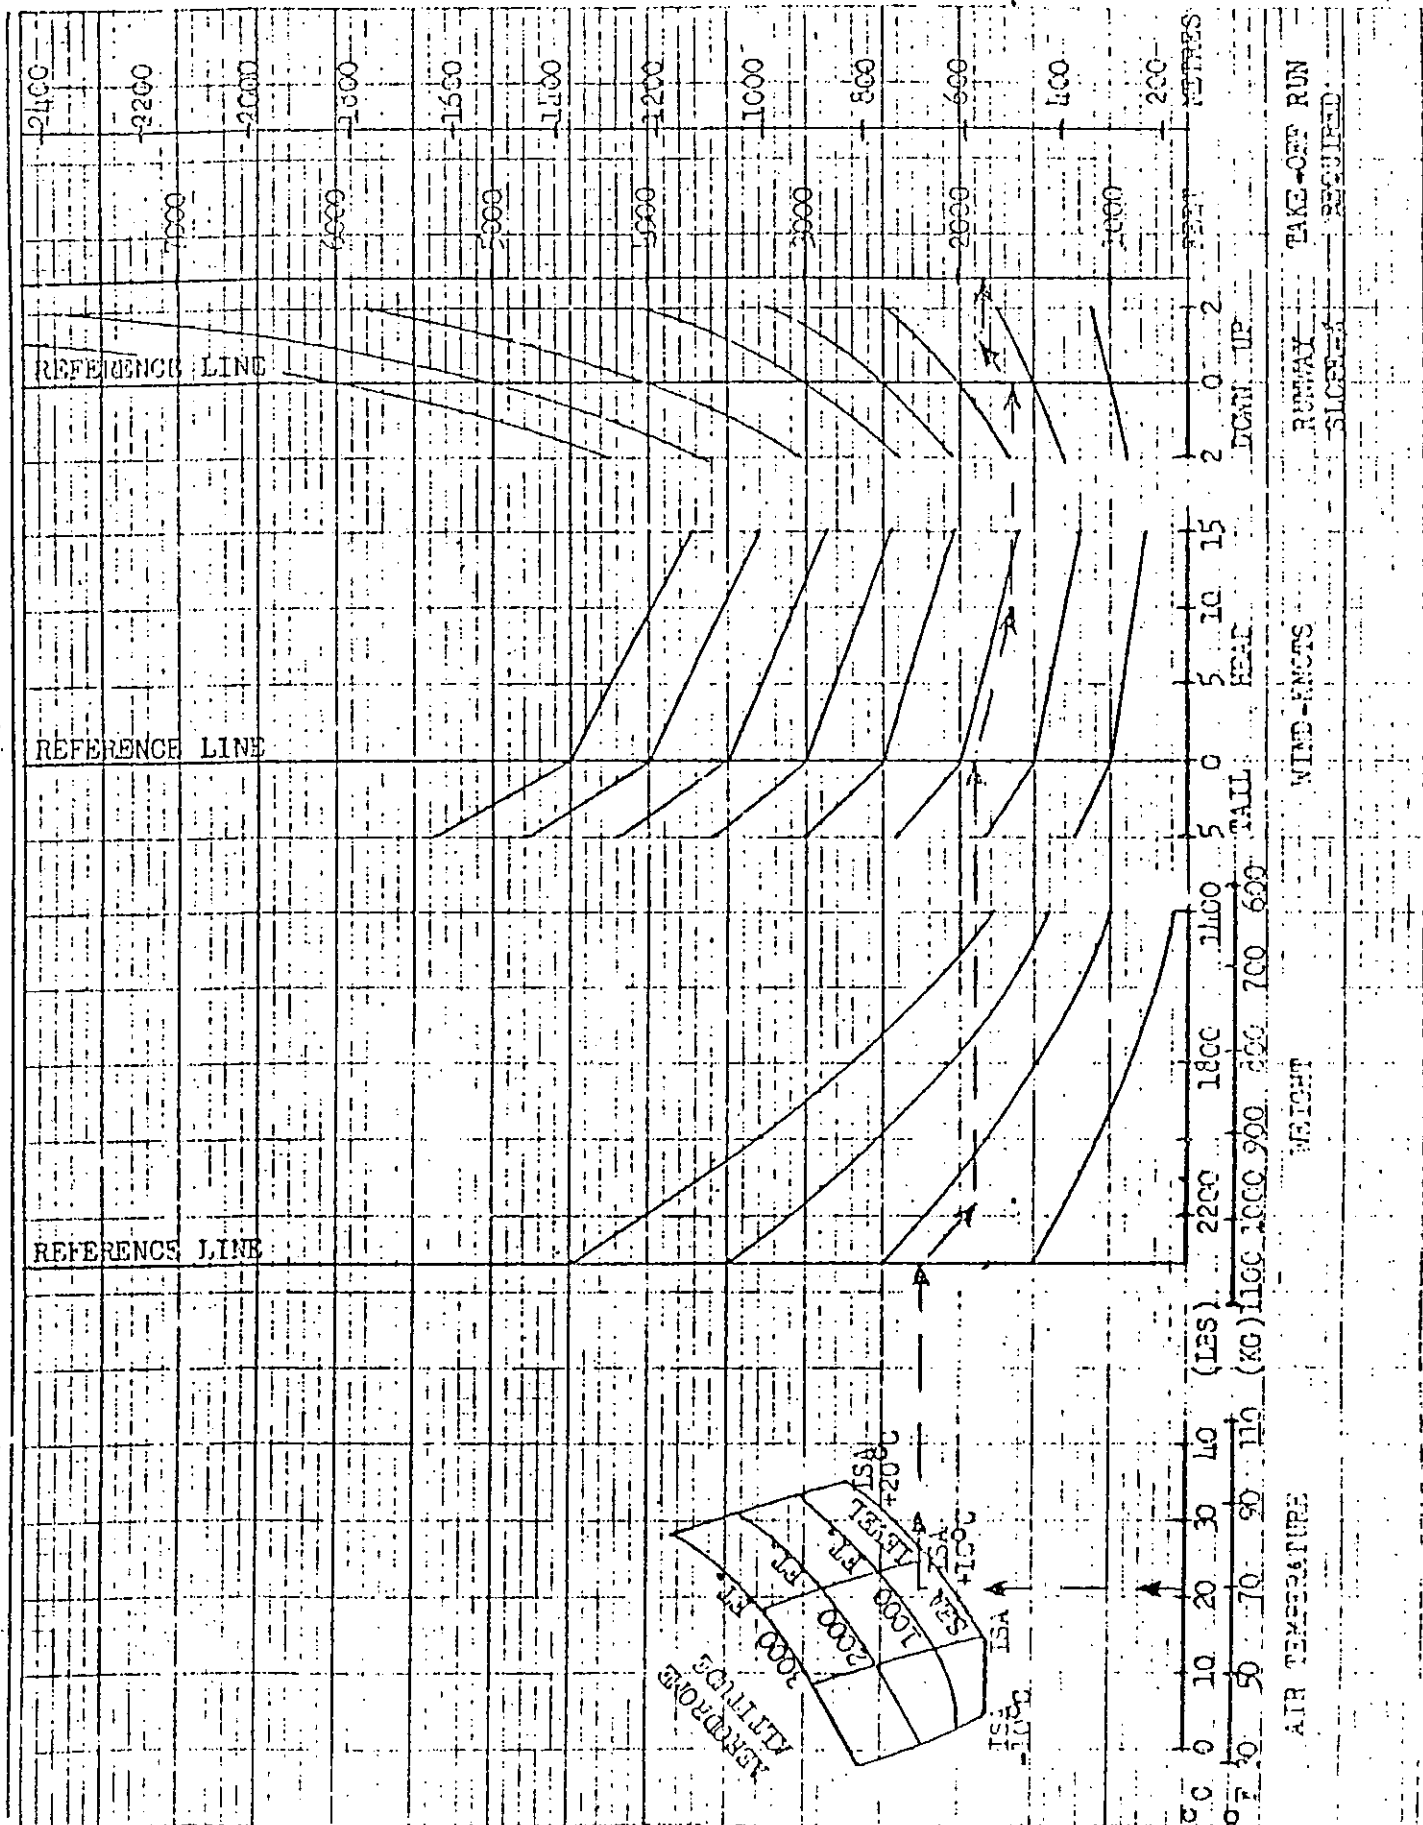

Rev. #2

KEUFFEL & CO

Rev. #2, 15-10-74

AIR TEMPERATURE  
WEIGHT  
MIND-FUNCTS  
RUMMAX  
SLOPE-S  
TAKE-OFF RUN  
REQUIRED

SECTION V. PERFORMANCE (continued)

2. TAKE-OFF DISTANCE REQUIRED - FIGURE 10.

The take-off distance required from rest to the 50 ft. height point is shown in Figure 10 for varying air temperatures, aerodrome altitudes, weights, reported wind components and uniform runway slopes.

ASSOCIATED CONDITIONS:

- Engine Full Throttle
- Wing Flaps Retracted
- Technique Accelerate to the take-off safety speed of 74 MPH-I.A.S., 64 Knots (77 MPH-E.A.S., 67 Knots) and rotate. This take-off safety speed is for all weights and altitudes.
- Runway Dry Tarmac Runway

ILLUSTRATED EXAMPLE:

The example given by the arrowed dashed line shows that with an air temperature of 23°C (I.S.A. + 9°C, 73°F), at an aerodrome altitude of 400 feet and a weight of 2100 pounds (956 Kg.), with a reported tailwind component of 2 knots and a uniform downhill runway slope of 1%, the take-off distance required is 2700 feet (823 metres).

NOTES:

- (1) The measured take-off over 50 feet distance has been factored by 1.25 to obtain the scheduled take-off distance required.



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575
CHECKED		MODEL PA-28- 151
APPROVED		PAGE 65

SECTION V. PERFORMANCE (continued)

- (2) The wind correction grids are factored so that 50% of headwinds and 150% of tailwinds are obtained. Reported winds may, therefore, be used directly in the grids.
  
- (3) For operation from short dry grass, refer to page 62, Note (2), to correct for the additional take-off run required.

REV. #2, 15-10-74

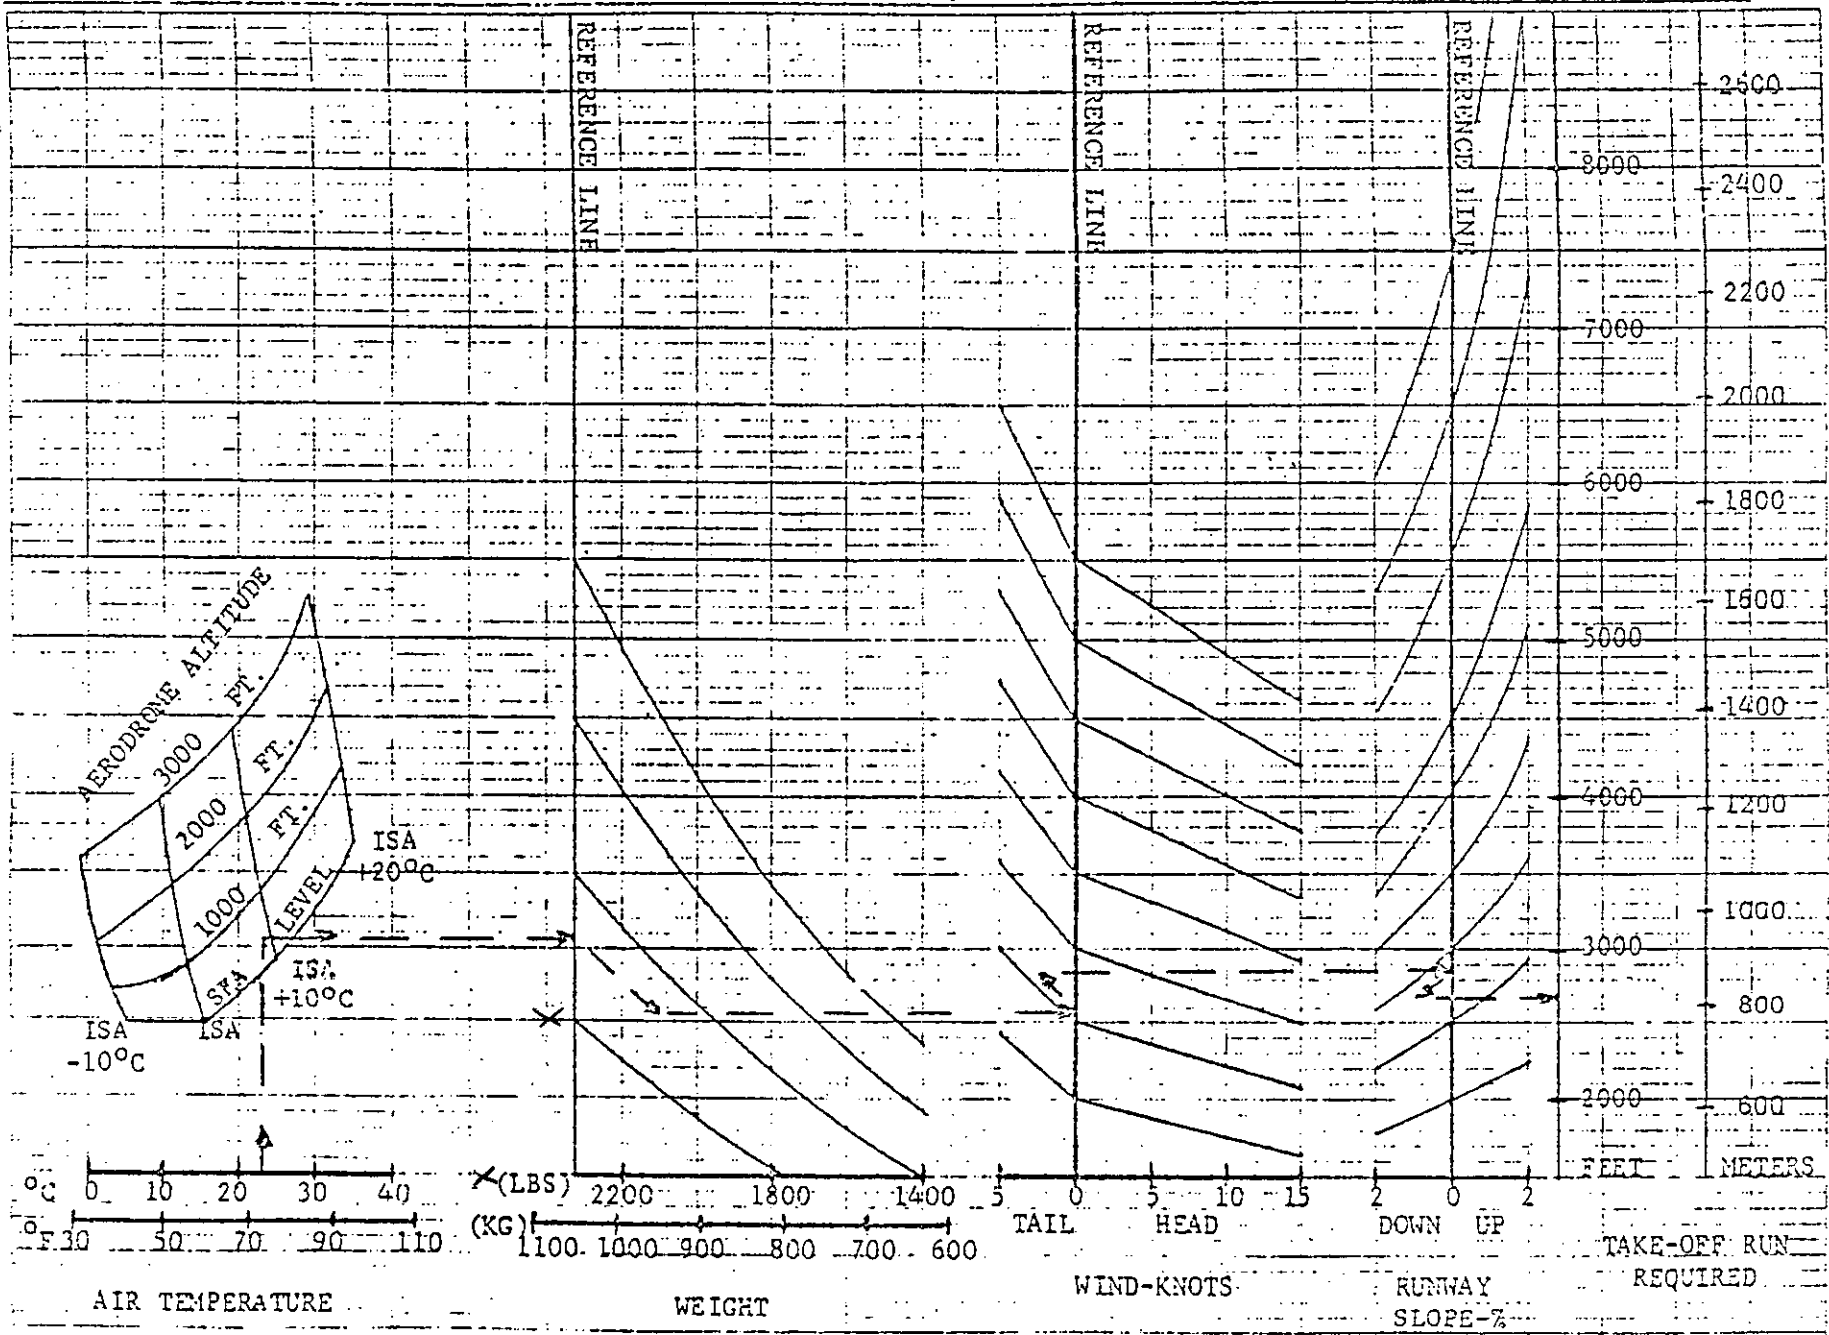


FIGURE 10. TAKE-OFF DISTANCE REQUIRED

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 67

SECTION V. PERFORMANCE (continued)

E. NET TAKE-OFF FLIGHT PATH

The net gradient of climb between 50 feet height and 1000 feet height is shown in Figure 11 for varying air temperatures, aerodrome altitudes, weights and reported wind components.

ASSOCIATED CONDITIONS:

Engine	Full Throttle
Wing Flaps	Retracted
Airspeed	74 MPH - I.A.S., 64 Knots (71 MPH-E.A.S., 67 Knots)

This speed is valid for all weights and altitudes.

ILLUSTRATED EXAMPLE

The example given by the arrowed dashed lines shows that with an air temperature of 24°C (I.S.A. + 13°C, 75°F) at an aerodrome altitude of 2000 feet, a weight of 1800 pounds (816 Kg.) and a reported headwind component of 10 Knots, the net gradient of climb is 9.4%.

The horizontal distance traveled to climb from 50 feet to 1000 feet above the terrain is calculated as follows:

Height increment (for every case) is 1000-50 = 950 feet.

Horizontal distance =  $\frac{950 \times 100}{9.4} = 10106$  feet

10106 feet x (.3048 metres/foot) = 3080 metres

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575
CHECKED		MODEL PA-28-151
APPROVED		PAGE 68

SECTION V. PERFORMANCE (continued)

NOTES:


- (1) The data given in Figure 11 has been derived from gross performance reduced by a margin of 2.0% gradient.
- (2) The wind correction grids are factored so that 50% of headwinds and 150% of tailwinds are obtained. Reported winds may, therefore, be used directly in the grids.

RADIUS OF A STEADY TURN


If, in the flight path construction a significant change of heading is to be assumed, the radius of turn can be assumed to be 2350 feet (a steady rate one, 180° per minute turn).

FIGURE - 11 NET TAKE-OFF FLIGHT PATH

NET GRADIENT OF CLIMB - PERCENT

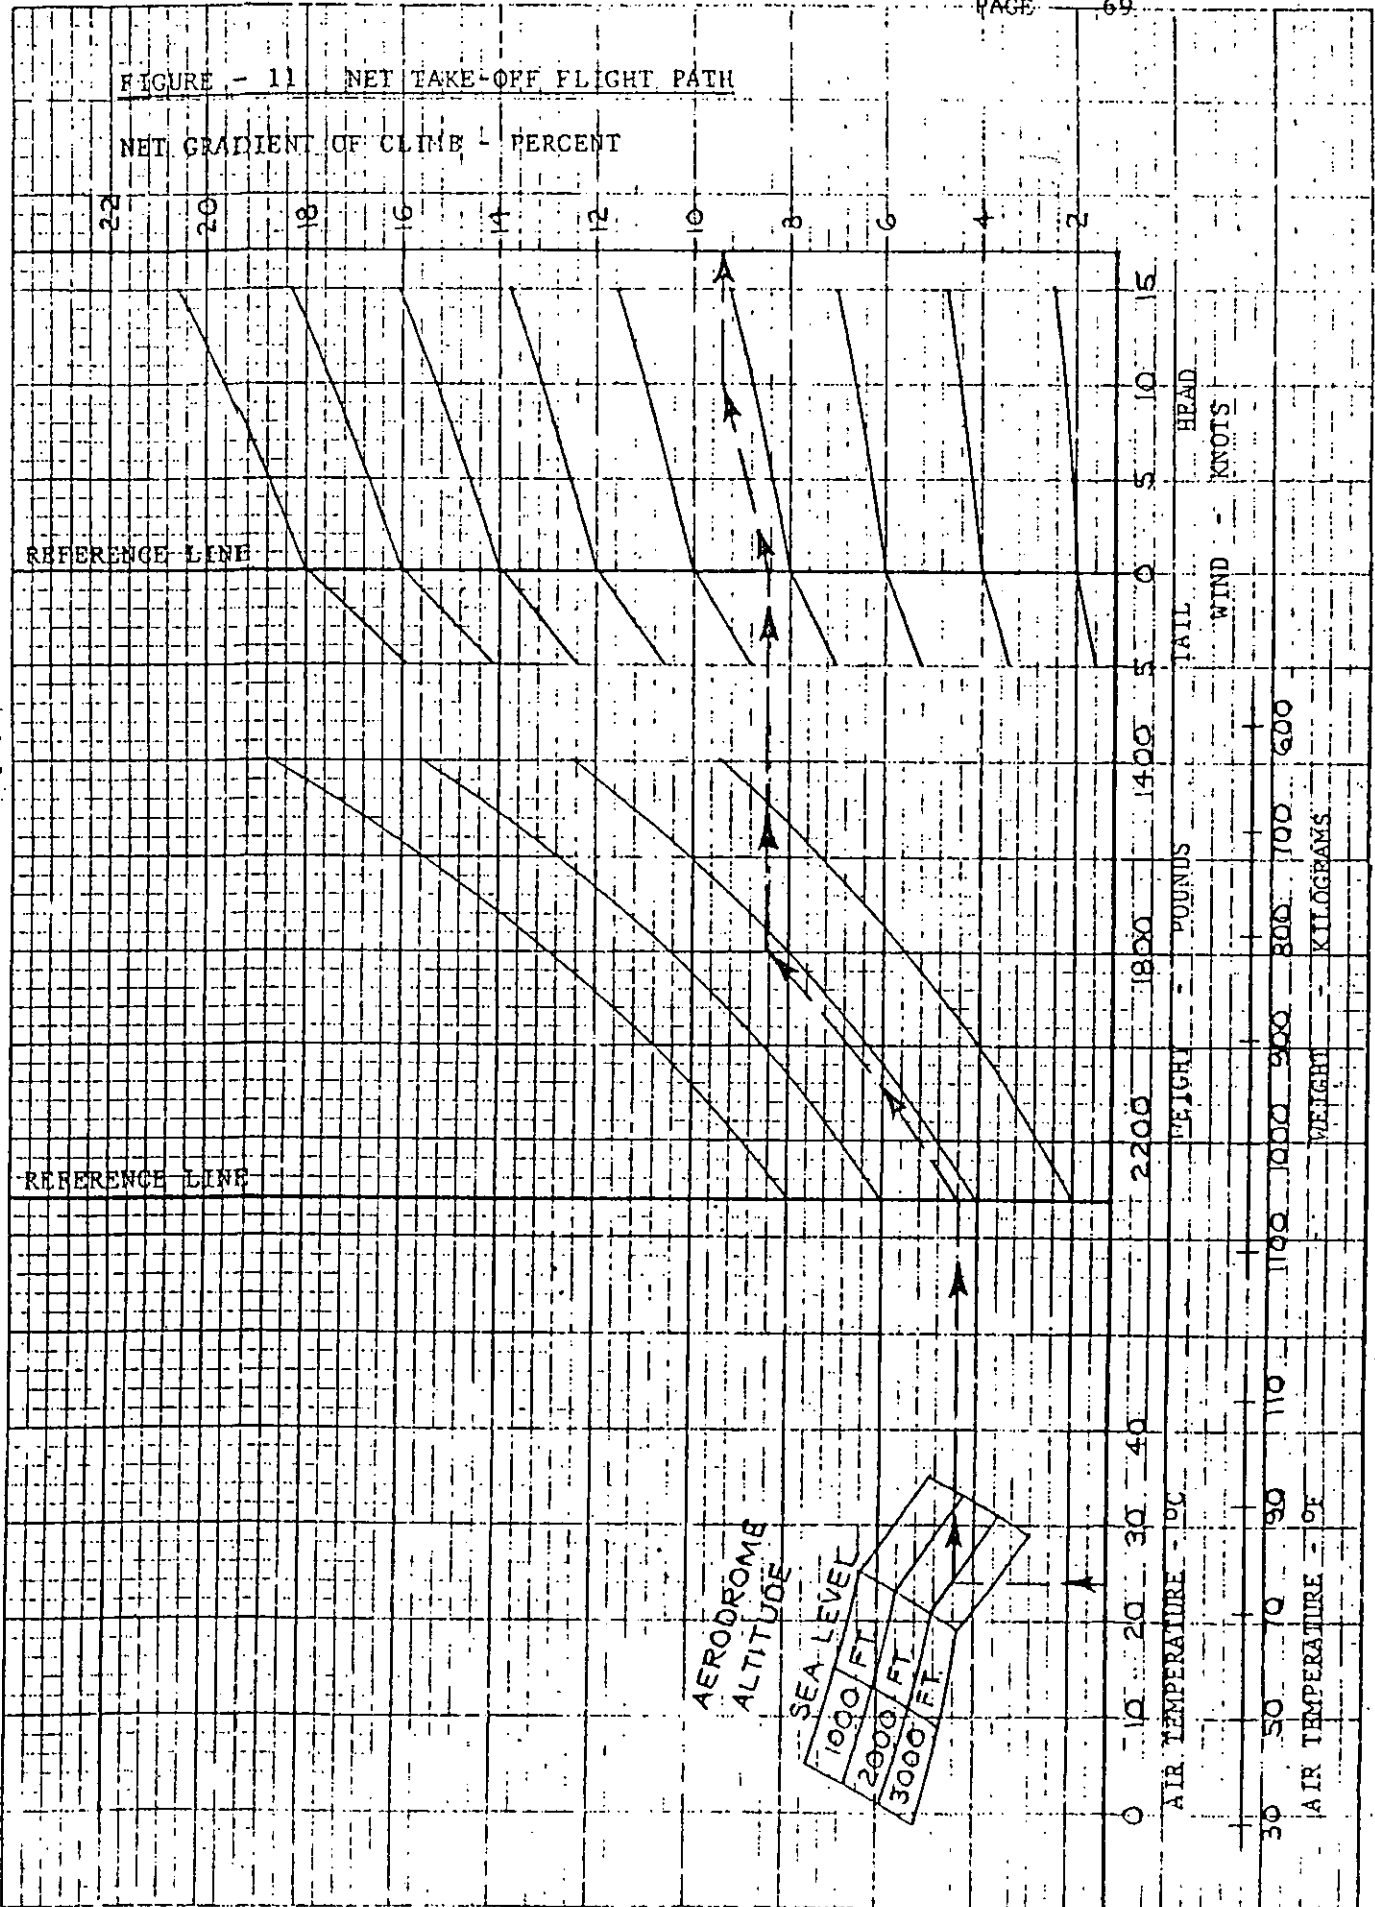

AERODROME ALTITUDE

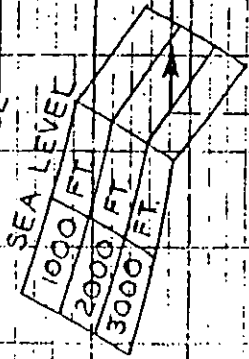

AIR TEMPERATURE - °C

AIR TEMPERATURE - °F

0 10 20 30 40

50 50 70 90 110

WEIGHT - POUNDS

WEIGHT - KILOGRAMS

2200 1800 1400

800 700 600

TAIL

WIND

HEAD

KNOTS

0 5 10 15

20 18 16 14 12 10 8 6 4 2

REFERENCE LINE

REFERENCE LINE

C.A.A.

**J. R. B. AVIATION LIMITED**  
**SOUTHEND AIRPORT ESSEX**  
WEIGHT AND CENTRE OF GRAVITY SCHEDULE

DATE: 23-9-81 REF: JRB 9077  
 AIRCRAFT TYPE: 102S-151 AIRCRAFT REG: G-BSEY  
 CONSTRUCTOR: PCCA SERIAL NO.: 98-7515076  
 MAXIMUM AUTHORIZED WEIGHT: 2325  
 CENTRE OF GRAVITY LIMITS REFER TO FLIGHT MANUAL REF.

PART A BASIC WEIGHT

THE BASIC WEIGHT OF THE AIRCRAFT AS CALCULATED FROM WEIGHING REPORT SIGWEN INTERNATIONAL LTD  
 DATED SEPT 16 1981 IS 1424.7 \* LB. \* **SEE FACING PAGE 52, FLT. MANUAL.**  
 THE CENTRE OF GRAVITY OF THE AIRCRAFT IN THE SAME CONDITION AT THIS WEIGHT AND WITH THE  
 LANDING GEAR EXTENDED IS 86.49 IN. AFT OF THE DATUM.  
 THE TOTAL MOMENT ABOUT THE DATUM IN THIS CONDITION IS: 123222.3 LB. IN.  
 NOTE: THE DATUM IS 78.4 INS FWD OF WING LEADING EDGE

THIS IS DEFINED IN THE FLIGHT MANUAL. ALL LEVER ARMS ARE DISTANCES IN INCHES  
 AFT OF DATUM.

THE BASIC WEIGHT INCLUDES THE WEIGHT OF 2 US GALLONS UNUSABLE FUEL AND 1.8 GALLONS  
 USABLE OIL AND THE WEIGHT OF THE FOLLOWING ITEMS WHICH COMPRISE THE LIST OF BASIC  
 EQUIPMENT:-

<u>ITEM</u>	<u>WEIGHT (LB.)</u>	<u>LEVER ARM (IN.)</u>
STANDARD FLIGHT INSTRUMENTS		
FIRE EXTINGUISHER		
RADIO EQUIPMENT		

NOTE:  
 Max TOW 2325 lbs  
 Max LW 2325 lbs

PART B VARIABLE LOAD

THE WEIGHT AND LEVER ARMS OF THE VARIABLE LOAD ARE SHOWN BELOW. THE VARIABLE LOAD  
 DEPENDS UPON THE EQUIPMENT CARRIED FOR THE PARTICULAR ROLE:-

<u>ITEM</u>	<u>WEIGHT (LB.)</u>	<u>LEVER ARM (IN.)</u>	<u>MOMENT (LB. IN.)</u>
PILOT	ACTUAL	80.5	

LOADING INFORMATION (DISPOSABLE LOAD)

TOTAL MOMENT CHANGE WHEN THE LANDING GEAR IS RETRACTED IN LG. NO. 15 0/a

APPROPRIATE LEVER ARMS ARE:-

<u>ITEM</u>	<u>WEIGHT (LB.)</u>	<u>LEVER ARM (IN.)</u>	<u>CAPACITY</u>
FUEL IN TANKS		95.00	90 GALLONS
ENGINE OIL	<u>Included in empty weight</u>		1.8 GALLONS
FORWARD PASSENGER			
REAR PASSENGER		142.8	
ASSIGNMENT ROW 1 SEATS		80.5	
ASSIGNMENT ROW 2 SEATS		118.1	
ASSIGNMENT ROW 3 SEATS			
ASSIGNMENT ROW 4 SEATS			
ASSIGNMENT ROW 5 SEATS			

FUEL DENSITY 7.2 LB./GAL. AND OIL DENSITY 9.0 LB./GAL.

NOTE: TO OBTAIN THE TOTAL LOADED WEIGHT OF AIRCRAFT, ADD TO THE BASIC WEIGHT THE WEIGHTS OF THE VARIABLE AND DISPOSABLE LOAD ITEMS TO BE CARRIED FOR THE PARTICULAR ROLE.

THIS SCHEDULE WAS PREPARED (DATE) 8.8.90 AND SUPERSEDES ALL PREVIOUS ISSUES.

SIGNED [Signature] INSPECTOR/ENGINEER

J R B Aviation Ltd.  
 Southend Airport,  
 ANR 116

NOTE: THE COMMANDER OF AN AIRCRAFT REGISTERED IN THE UNITED KINGDOM SHALL SATISFY HIMSELF BEFORE THE AIRCRAFT TAKES OFF THAT THE LOAD CARRIED BY THE AIRCRAFT IS OF SUCH WEIGHT, AND IS SO DISTRIBUTED AND SECURED, THAT IT MAY SAFELY BE CARRIED ON THE INTENDED FLIGHT. (A/C 1980 ART: 3(D)).

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575
CHECKED		MODEL PA-28-151
APPROVED		PAGE 70

SECTION V. PERFORMANCE (continued)

F. En Route Performance

1. EN ROUTE PERFORMANCE CEILING AND GROSS RATE OF CLIMB -

FIGURE 12.

The en route performance ceiling may be obtained from Figure 12 for varying weights, altitudes and air temperatures. The chart may also be used to determine the gross pressure rates of climb.

ASSOCIATED CONDITIONS:

Engine Full Throttle

Wing Flaps Retracted

Airspeed	I.A.S.	E.A.S.
2325 Lbs.	86 MPH (75 Kts.)	87 MPH (76 Kts.)
1400 Lbs.	86 MPH (75 Kts.)	87 MPH (76 Kts.)

(Straight line variation between the points given for E.A.S.)

ILLUSTRATED EXAMPLE:

The example A given by the arrowed dashed line shows that for a weight of 2120 pounds (962 Kgs.) in an atmosphere of I.S.A. + 20°C, the performance ceiling is 9,400 feet.

The example B shows that at a pressure altitude of 3,000 feet in an atmosphere of I.S.A. + 10°C at a weight of 1800 pounds (816 Kgs.), the gross pressure rate of climb is 808 feet per minute.




PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 71

SECTION V. . PERFORMANCE (continued)

NOTES:


- (1) The performance ceiling is the maximum altitude which may be assumed when establishing compliance with the operating regulations pertaining to en route flight. It does not prohibit flying at a higher altitude (although at some altitudes, the operating regulations may require oxygen to be carried), but it is unlikely that the performance ceiling will be achieved unless full throttle and the air speed quoted are used towards the end of the climb.

FIGURE 12 ENROUTE PERFORMANCE CEILING AND GROSS RATE OF CLIMB

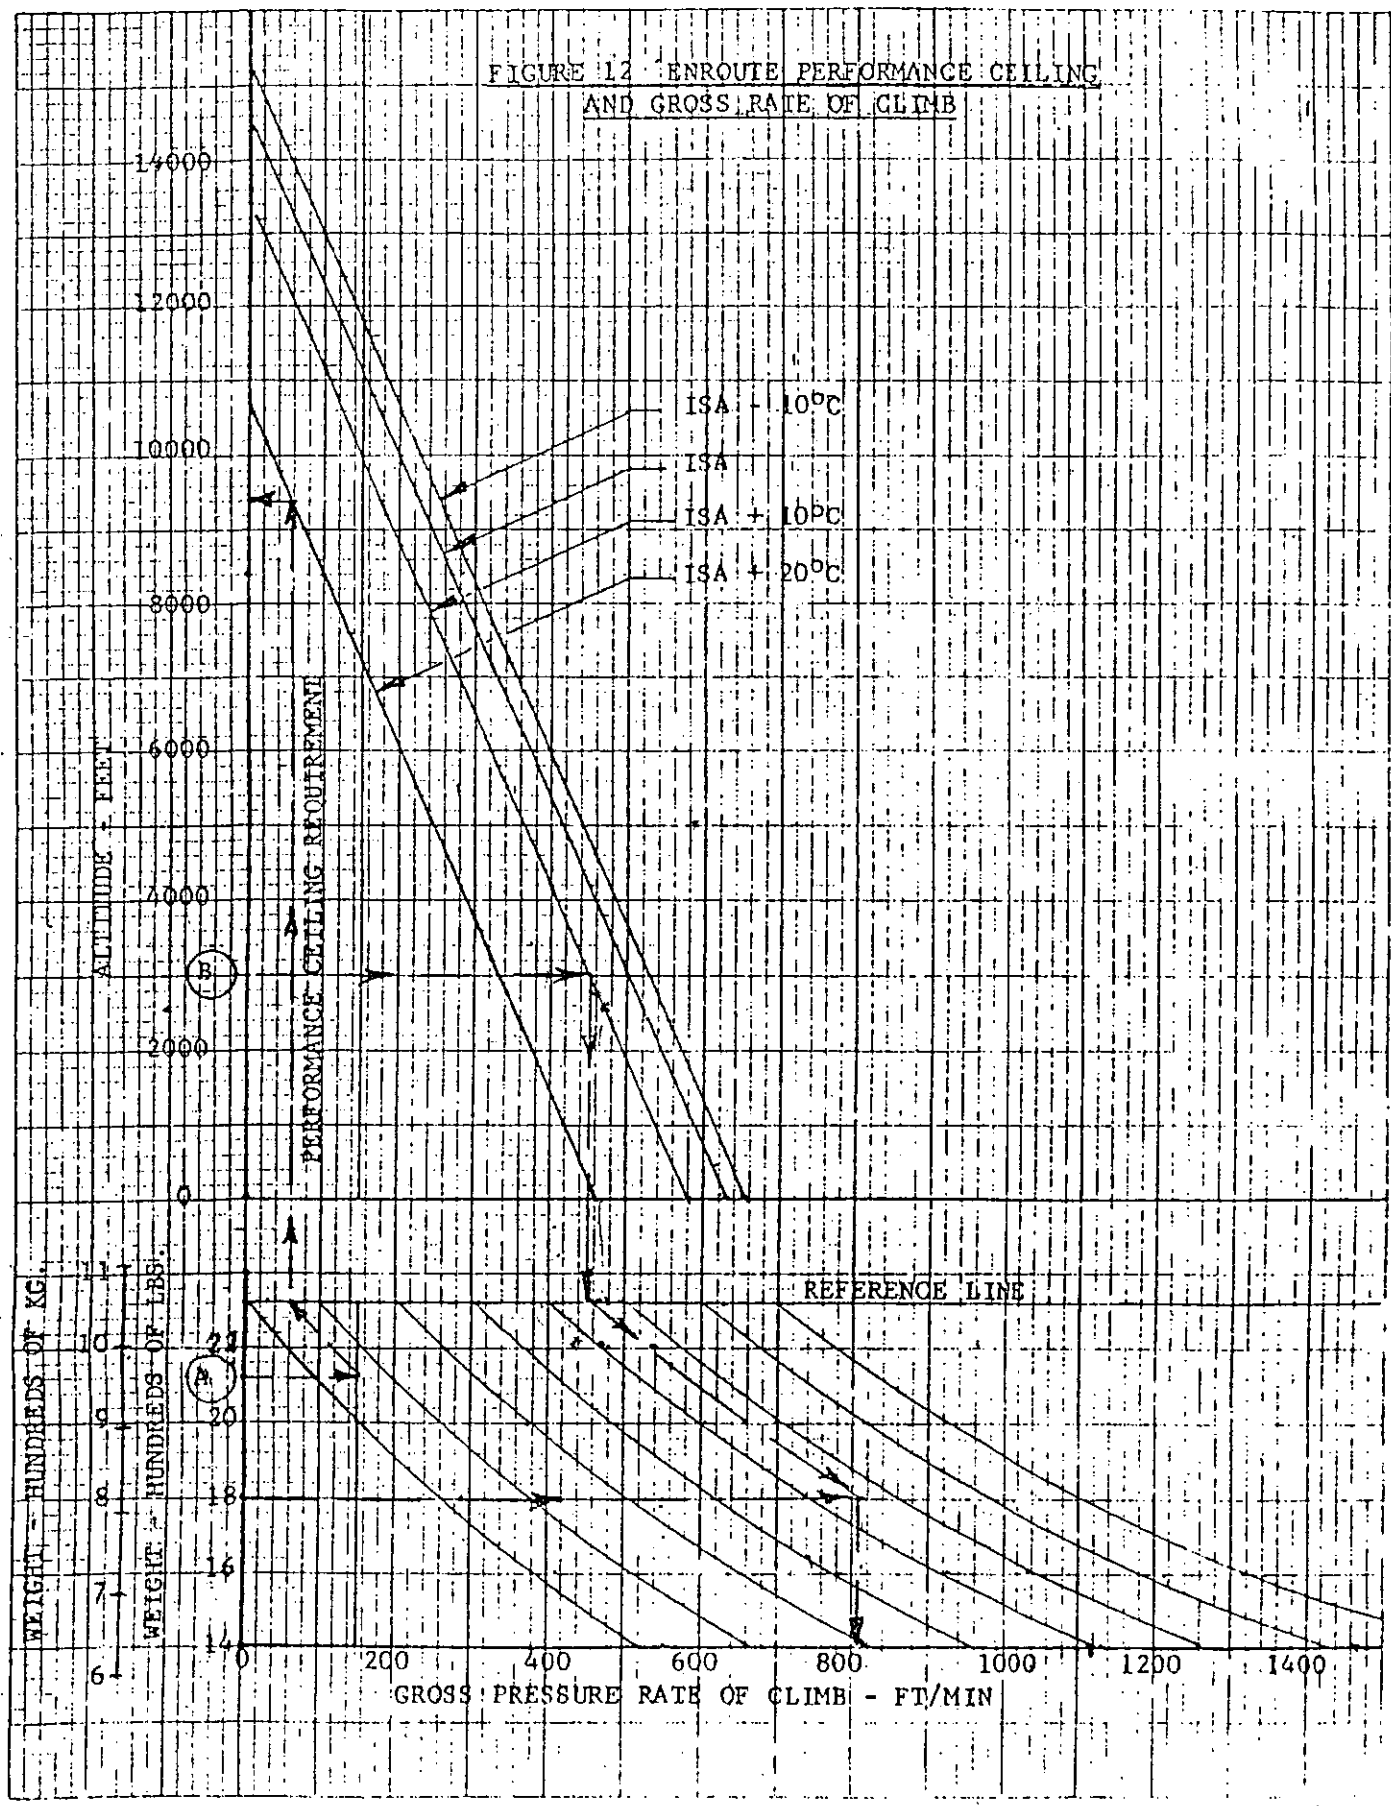

REF ID: A66000

FIGURE 12 ENROUTE PERFORMANCE CEILING AND GROSS RATE OF CLIMB

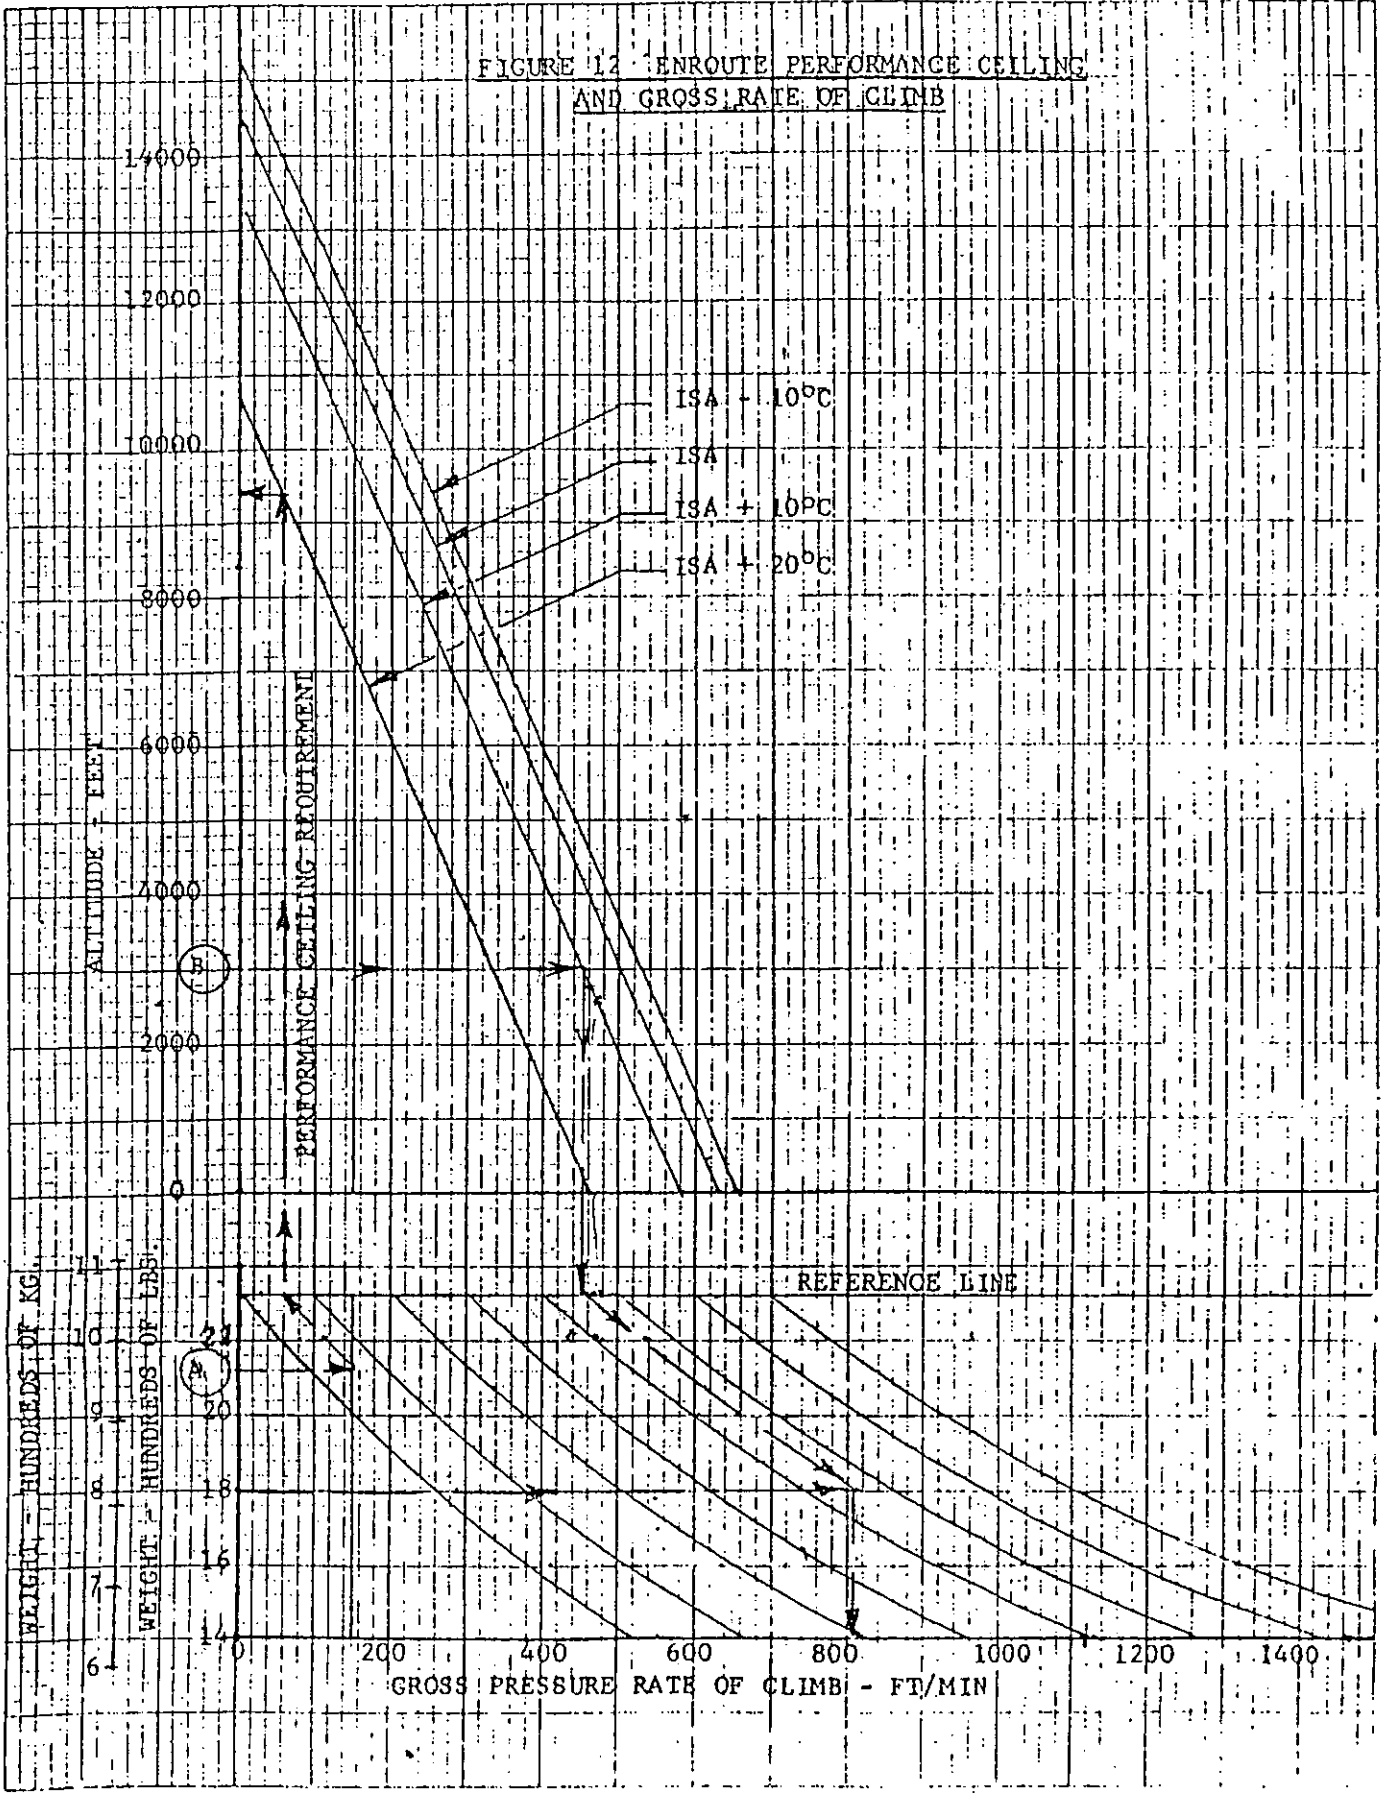

KT/FFC/S LA CO

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 73

SECTION V. PERFORMANCE (continued)

G. Landing Procedures and Speeds

1. LANDING TECHNIQUE

For the approach and landing refer to pages 49, 50 and 51.

2. MAXIMUM CROSSWIND COMPONENT

The maximum crosswind component in which the aeroplane has been demonstrated to be safe for take-off and landing is 17 Knots (20 MPH) at a tower height of 33 feet.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 74

SECTION V. PERFORMANCE (continued)

H. Landing Field Lengths

1. LANDING DISTANCE REQUIRED - FIGURE 13.

The total landing distance over a 50 ft. obstacle is shown in Figure 13 for varying air temperatures, aerodrome altitudes, weights, reported wind components and uniform runway slopes.

ASSOCIATED CONDITIONS:

Engine	Idling
Wing Flaps	40° (Fully Deflected)
Technique	Approach at an airspeed of 73 MPH-I.A.S., 63 Knots, (75 MPH-E.A.S., 65 Knots). The flaps are retracted after touchdown and maximum wheel braking is applied.
Runway	Dry Tarmac Runway (See Note 2).

ILLUSTRATED EXAMPLE:

The example given by the arrowed dashed line shows that at the sea level aerodrome altitude with an air temperature of 32°C (I.S.A. + 17°C, 90°F) at a weight of 2000 pounds (907 Kgs.), with a reported headwind component of 10 Knots and a uniform downhill runway slope of 1.0%, the total landing distance over a 50 foot obstacle is 1250 feet (381 metres).

NOTES:


- (1) The landing distance over 50 feet includes the Air Navigation Regulation field length factor 1.43. This means that distances obtained from Figure 13 may be equated directly to the landing distance available.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHIEF		
APPROVED		PAGE 75

SECTION V. PERFORMANCE (continued)

- (2) For operations from dry grass runways with freshly cut grass and firm subsoil, the distances for a dry tarmac runway should be increased by 8%.
- (3) The wind grids are factored so that 50% of headwinds and 150% of tailwinds are obtained. Reported winds may, therefore, be used directly in the grids.

FIGURE 13. LANDING DISTANCE REQUIRED (A N. R. FACTOR OF 1.43, INCLUDED)

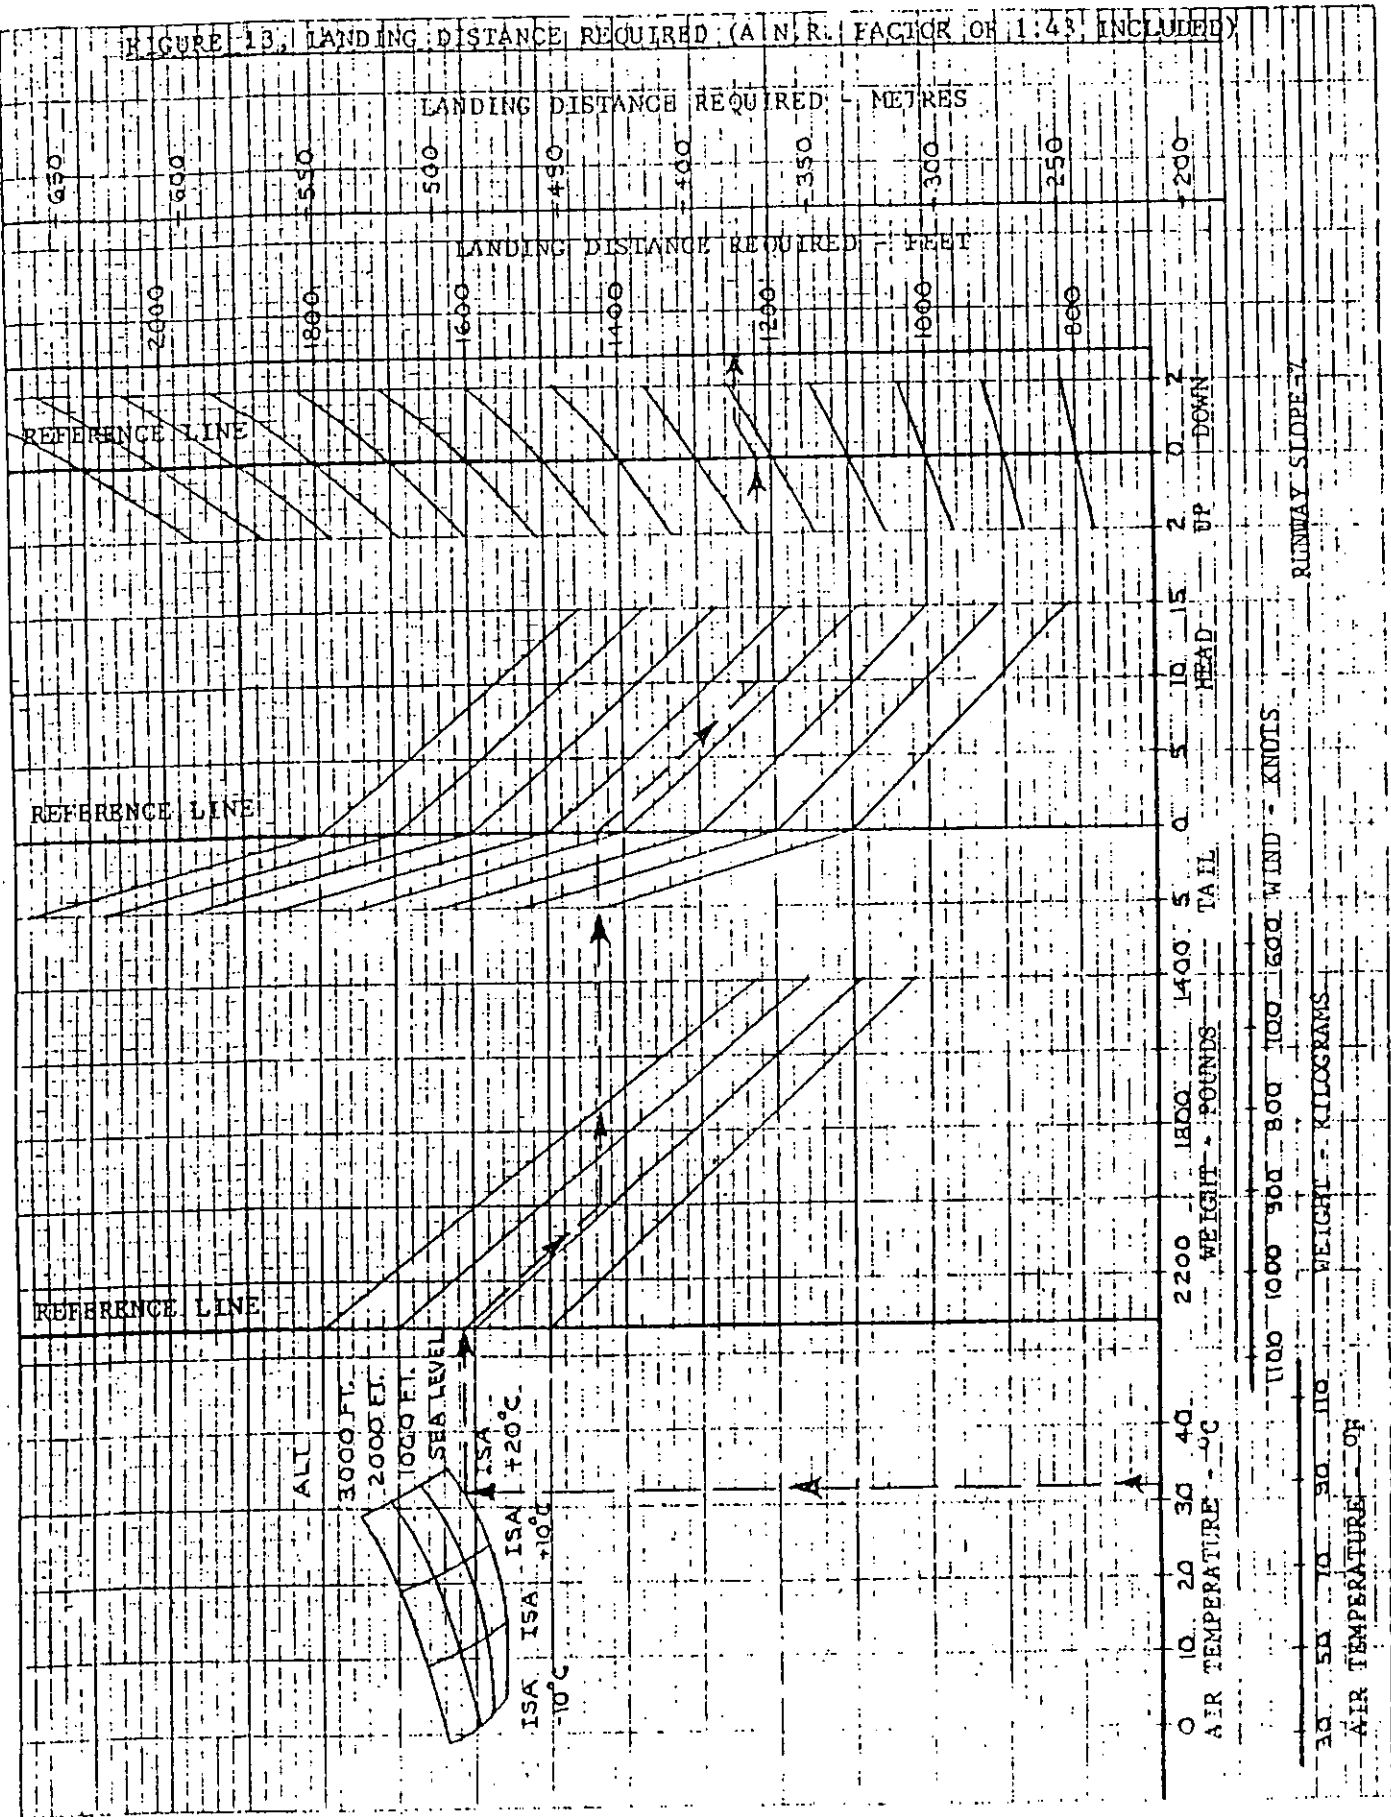

NEUFEL & CO

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 77

SECTION V. PERFORMANCE (continued)

I. Net Glide Range

The horizontal glide range from any altitude is shown in Figure 14, for the aeroplane at a gross weight of 2325 pounds and a no wind condition.

ASSOCIATED CONDITIONS

Engine	Power off, propeller windmilling
Wing Flaps	Retracted
Airspeed	83 MPH-I.A.S., 72 Knots, (85 MPH-E.A.S., 74 Knots)


The example given by the arrowed dashed lines shows that at an altitude above the terrain of 8400 feet, the net glide range for a no-wind condition is 14 nautical miles (26 Kilometres).

NOTES:

- (1) The net glide range has a 1% steeper gradient than the gross glide range.



FIGURE 14 NET GLIDE RANGE

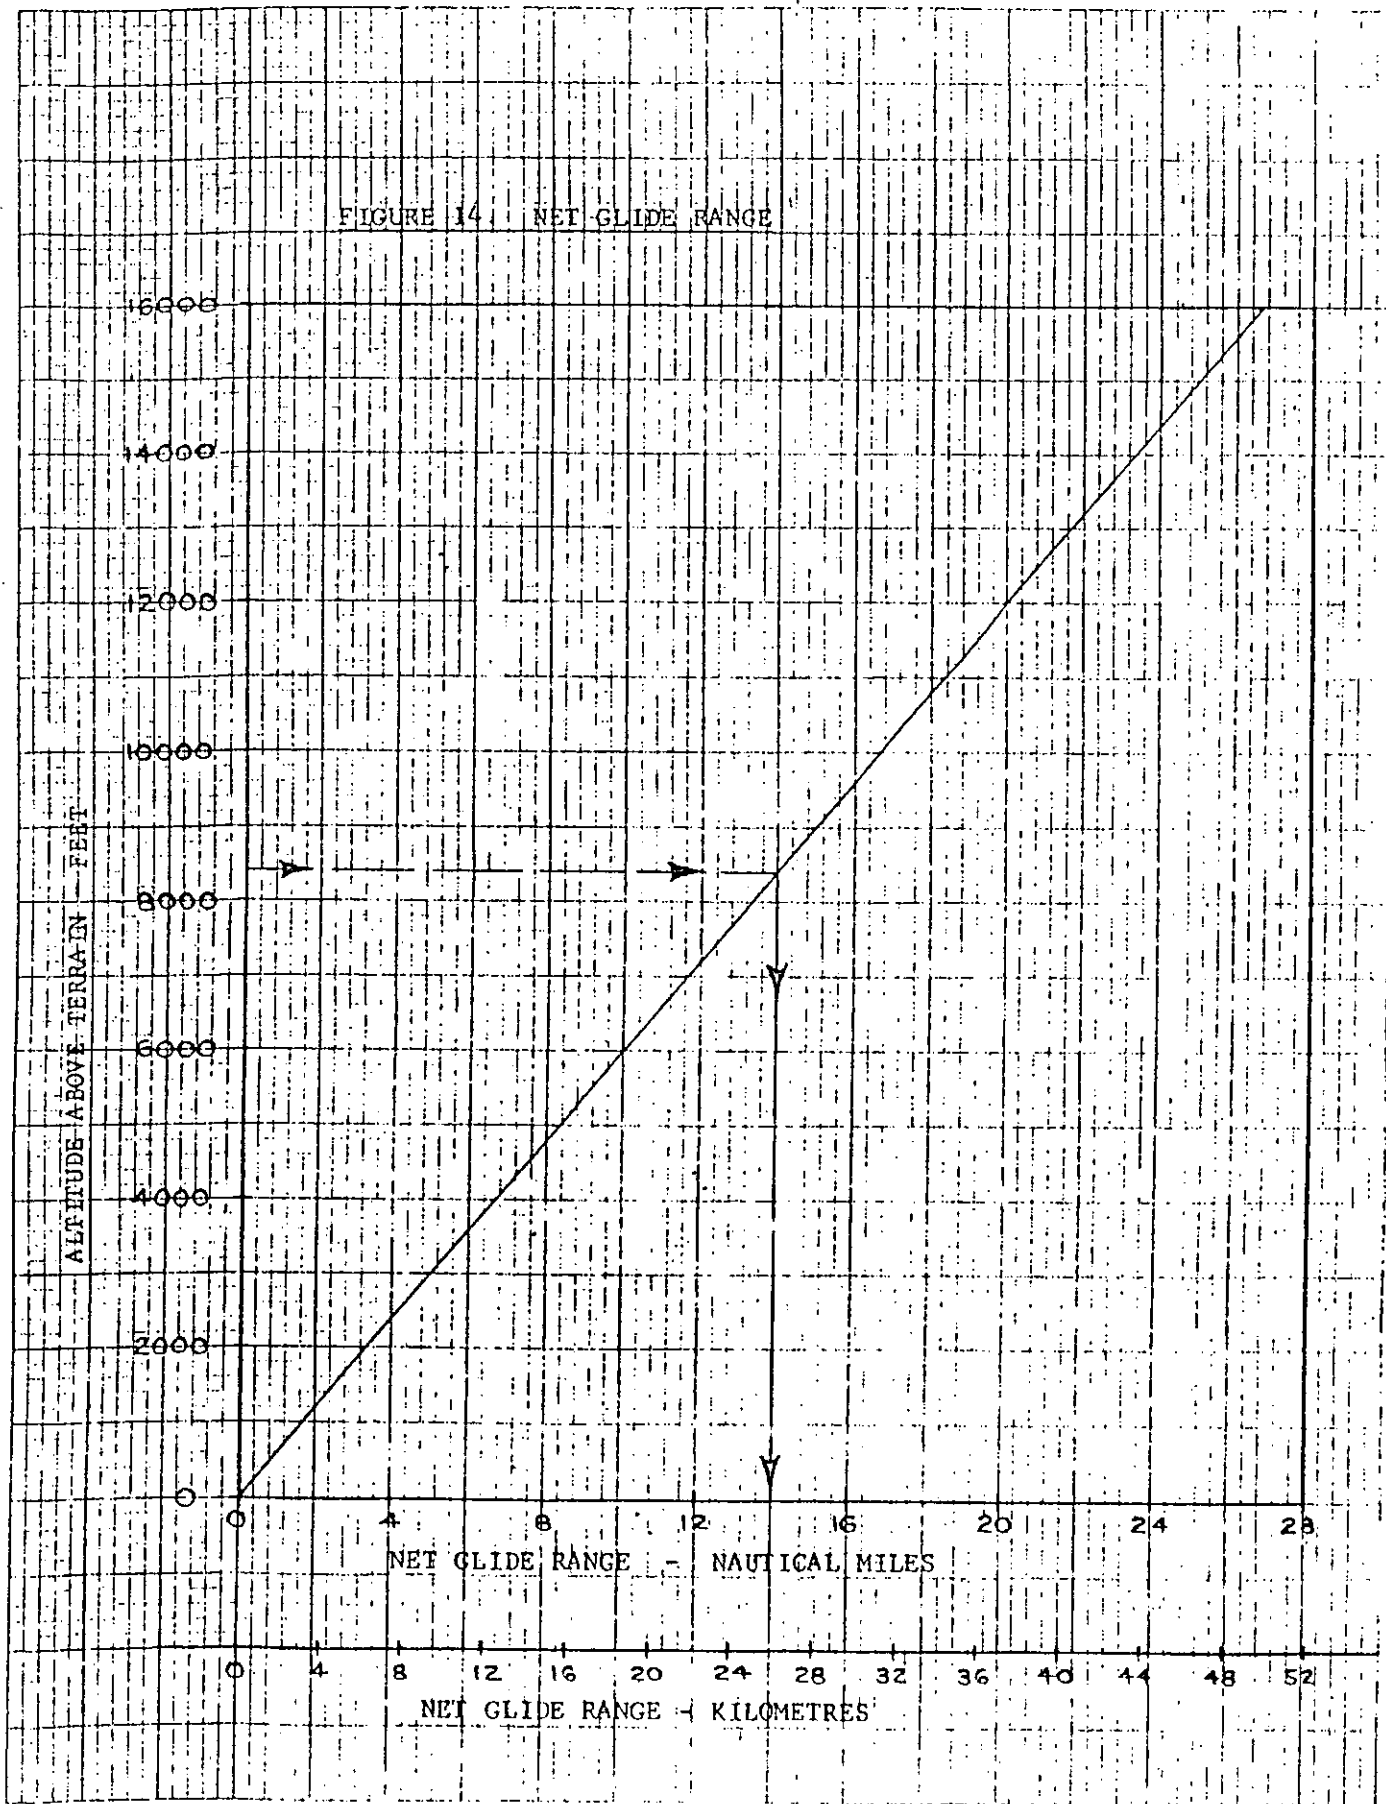

KUYPPEL & CO

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED		PAGE 79

SECTION VI. SUPPLEMENTS

- A. This section of the manual contains, in the form of supplements, information applicable to any particular feature, such as optional equipment, and uses of the aeroplane which are not covered by the information and data already included in the flight manual.
- B. Only the supplements pertinent to the individual aeroplane, listed on page 80 need to be included in this manual and the date of embodiment recorded on the Record of Supplements sheet.
- C. A supplement is identified by a number which is assigned to each complete supplement and recorded at the beginning of the individual presentation and on the Record of Supplements sheet.
- D. The Record of Supplements sheet is presented on page 80 of this report.
- E. It is recommended that amendments to Supplements be usually effected by a re-issue of the complete Supplement.
- F. The amendments will be indicated on the Record of Supplements sheet in the Supplement Title column by listing the title and amendment, or revision, number.
- G. Every copy of Report VB-575 should contain the latest revised copies of the Record of Supplements sheet and the Supplement System explanatory page.



PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED	SUPPLEMENT NUMBER 1	PAGE 81

ELECTRIC PITCH TRIM INSTALLATION

SECTION VI. SUPPLEMENTS (continued)

A. Limitations

The minimum height above the terrain for operation of the electric pitch trim is 400 feet.

B. Procedures

1. Preflight

- (a) Circuit Breaker - Set
- (b) Trim fore and aft
- (c) Manually override electric pitch trim
- (d) Check manual trim operation
- (e) If trim system fails preflight, disengage electric pitch trim by pushing the pitch trim switch on the instrument panel to the "OFF" position. If the electric pitch trim does not disengage, have system repaired before flight.

2. Inflight

- (a) Press the electric pitch trim switch fore and aft as required for trim.

C. Emergency Operation

1. In case of malfunction (runaway trim action) -

Disengage the electric trim system by pressing the push button switch on the instrument panel to the "OFF" position.

2. In emergency -

The electric pitch trim may be overpowered using the manual pitch trim.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHANGED		
APPROVED	<u>SUPPLEMENT NUMBER 1</u>	PAGE <u>82</u>

ELECTRIC PITCH TRIM INSTALLATION

SECTION VI. SUPPLEMENTS (continued)

3. In the cruise configuration, malfunction results in 10° pitch change and 200 feet altitude variation.
4. In the approach configuration, a malfunction can result in a 5° pitch change and 50 feet altitude loss.

C. Performance

The aeroplane performance remains unchanged.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
CHECKED		
APPROVED	SUPPLEMENT NUMBER 2	PAGE 83

AUTOCONTROL III INSTALLATION

SECTION VI. SUPPLEMENTS (continued)

A. Limitations

1. Autopilot use is prohibited above 178 MPH-I.A.S. (155 knots).
2. Auto-Control III must be "OFF" for takeoff and landing.
3. The minimum height above the terrain for operation of the Auto-Control III is 640 feet.

B. Procedures

1. Normal Operation -

Refer to the current Auto-Control III Owner's Handbook.

C. Emergency Operation

1. In case of malfunction, turn "OFF" autopilot.
2. In emergency, autopilot may be overpowered manually.
3. In climb, cruise or descending flight, an autopilot runaway with a 3 second delay could result in 60° bank and 320 feet altitude loss.
4. In the approach configuration, an autopilot runaway with a 1 second delay, coupled or uncoupled, could result in 15° bank and 20 feet altitude loss.

D. Performance

The aeroplane performance remains unchanged.

PREPARED	PIPER AIRCRAFT CORP. DEVELOPMENT CENTER, VERO BEACH, FLA.	REPORT VB-575 MODEL PA-28-151
APPROVED		SUPPLEMENT NUMBER 3
		PAGE 84

AUTOFLITE II INSTALLATION

SECTION VI. SUPPLEMENTS (continued)

A. Limitations

1. Autopilot use is prohibited above 178 MPH-I.A.S. (155 knots).
2. Autoflite II must be "OFF" for take-off and landing.
3. The minimum height above terrain for operation of the "Autoflite II" is 640 feet.

B. Procedures

1. Normal Operation -

Refer to current Autoflite II Owner's Handbook.

C. Emergency Operation

1. In case of malfunction, press disconnect switch (located on the pilot's control wheel).
2. Move the switch (located on the control panel) to the "OFF" position.
3. Autoflite II may be overpowered manually.
4. In climb, cruise or descending flight, an autopilot runaway, with a 3 second delay could result in 60° bank and 320 feet altitude loss.
5. In the approach configuration, an autopilot runaway with a 1 second delay, coupled or uncoupled, could result in a 15° bank and 40 feet altitude loss.

D. Performance

The aeroplane performance remains unchanged.